



Manufacturer
Clarion Co., Ltd.

Export Division
Clarion Shoji Co., Ltd.
3, Kojimachi 5-chome, Chiyoda-ku, Tokyo, 102 Japan
Tel: 03-265-2931
Telex: J22908, J22152, J25550 CLARISHO

Closer Relations through
"Clarion Service Manual"

Service Manual

Overseas Sales Branch Offices

Clarion Corporation of America 5500 Rosecrans Ave., Lawndale, Calif., 90260 U.S.A. Tel: 213-973-1100 Telex: CLARIONLSA 66-4447
Clarion Corporation of America (Eastern Division) 100 Thirteenth Avenue, Ronkonkoma, New York 11779 U.S.A. Tel: 516-467-1120 Telex: 64-0787
Clarion Shoji (EUROPA) G.m.b.H. Rudolf-Diesel-Strasse 2, 6236 Eschborn 2, West Germany Tel: 06173-61036 Telex: 415414
Clarion (HONG KONG) Co., Ltd. 526, Ocean Centre, Canton Road, Tsimshatsui, Kowloon, Hong Kong Tel: 3-690528 Telex: HX6429/CLAHK
Clarion Canada Inc. 1401 Meyerside Dr. Mississauga, Ontario L5T 1G8, Canada Tel: 416-678-1367 Telex: 216968573 CLARION MSGA
Clarion Shoji (U.K.) Ltd. 4-6, Faraday Road, Dorcan Industrial Estate, Dorcan, Swindon, Wiltshire, SN3 5HQ United Kingdom Tel: (0793) 24081 Telex: 44689

Model **E951 MK II** (PE-9046A)
E950 MK II (PE-9047A)



E951 MK II



E950 MK II

SPECIFICATIONS:

Radio section

Circuit system: Superheterodyne
Tuning system: Electronic tuning
Receiving frequency: LW 155kHz to 281kHz
MW 531kHz to 1,602kHz
UKW(FM) 87.5MHz to 108MHz

Intermediate frequency:

LW, MW 459kHz
UKW(FM) 10.7MHz


Tape section

Reproduction system: Auto reversing
4 track, 2 channel, 2 program stereo cassette tape playback
(Monaural also capable)
Tape speed: 4.76cm/sec. (1 7/8 ips)

Composite

Speaker impedance: 4Ω×2, 4Ω×4
Power output: 15W×2
(at 10% distortion TYP.)
More than 22W×2
(at max. output TYP.)
Power supply voltage: DC 14.4V(10.8V to 15.6V)
Negative ground
Power consumption: Less than 7A
(at max. output)

Dimensions:


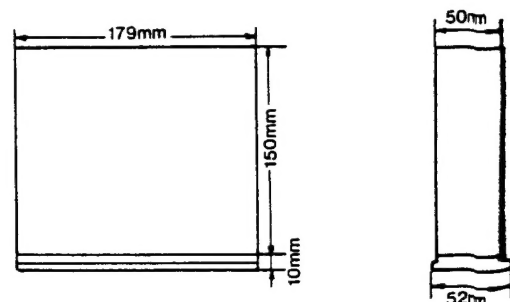


Weight: 1.8kg

- Noise Reduction System manufactured under license from Dolby Laboratories Licensing Corporation.
- Dolby and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

■ COMPONENT VIEW:



- E951 MKII (PE-9046A-A)
- E950 MKII (PE-9047A-A)

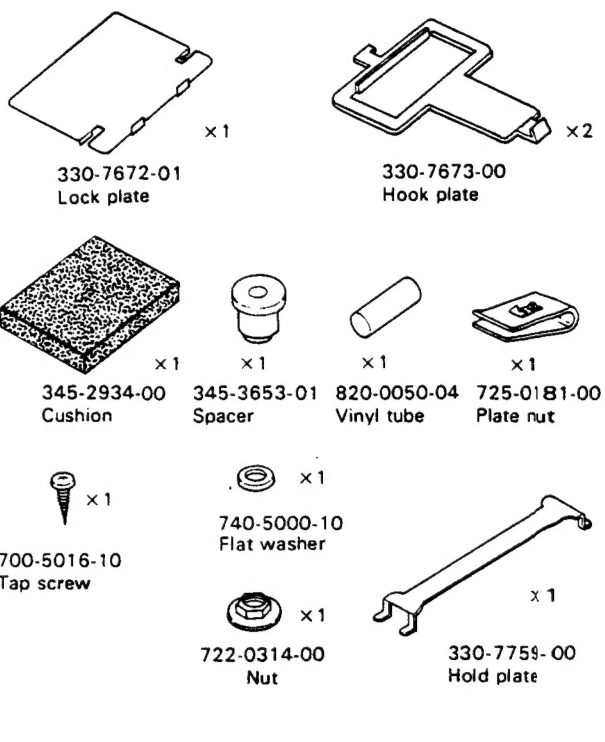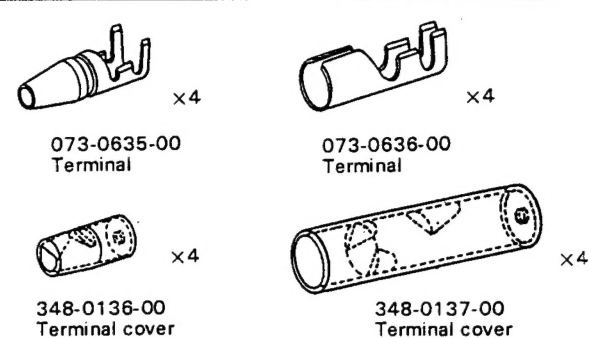Main unit	1	Parts bag	921-7554-00	1
Mounting bracket	300-6953-01	1	 <p>330-7672-01 Lock plate</p> <p>330-7673-00 Hook plate</p> <p>345-2934-00 Cushion</p> <p>345-3653-01 Spacer</p> <p>820-0050-04 Vinyl tube</p> <p>725-0181-00 Plate nut</p> <p>700-5016-10 Tap screw</p> <p>740-5000-10 Flat washer</p> <p>722-0314-00 Nut</p> <p>330-7754-00 Hold plate</p>	
Mounting bracket	300-6954-00	1		
Parts bag	922-1247-00	1		
Escutcheon	370-3562-00	1		
Parts bag	921-7908-00	1	 <p>073-0635-00 Terminal</p> <p>073-0636-00 Terminal</p> <p>348-0136-00 Terminal cover</p> <p>348-0137-00 Terminal cover</p>	
Terminal	073-0635-00	4		
Terminal	073-0636-00	4		
Terminal cover	348-0136-00	4		
Terminal cover	348-0137-00	4		

■ FEATURES:

- MW/LW/UKW-MPX electronic tuning radio with auto reverse stereo cassette player (FF, REW. lock).
- Provided radio traffic information (VF) system. (E951 MKII)
- Dolby NR.
- MTL (tape selector).
- LD (Loudness).
- APC (Automatic Program Control).
- BASS & TREBLE tone control.
- Max. power 22W×2. (TYP.)
- ARK mechanism.
- Remote control tuning lead.

■ADJUSTMENT:

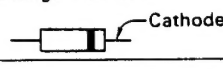
Adjustment item	Adjustment point	Procedure
S curve	IFT1 and IFT103	<ol style="list-style-type: none"> 1. Connect the output of an IF sweep generator to TP101 and the input of the vertical hold of an oscilloscope to TP105. 2. Ground TP104. 3. Adjust the S curve by means of IFT1 and IFT103. 
S curve fine adjustment	VR102	<ol style="list-style-type: none"> 1. Tune at 87.5MHz(87.500MHz), and input a 28dB non-modulated SSG signal. 2. Connect a digital volt meter between TP102 and TP103. 3. Adjust VR102 so that the voltage between TP102 and TP103 is 0V. 4. May adjust 0V by receiving weak broadcasting signal.
Stop seek sensitivity	VR101	<ol style="list-style-type: none"> 1. Tune at 87.5MHz(87.500MHz), input a 28dB non-modulated SSG signal. 2. Adjust VR101 so that the voltage of the cathode of D202 is in the range 1 to 4V. 
SASC	VR104	<ol style="list-style-type: none"> 1. Tune at 87.5MHz(87.500MHz), input an 55dB, 7kHz modulation frequency, 30% modulation degree SSG signal, and then turn on ST. SW. 2. Adjust the output level of the volume controller to 0dBm (0.775V). 3. Set the SSG output to 40dB and adjust VR104 so that the output level is -3dBm.
MPX 1. VCO 2. Separation	VR105 VR103	<ol style="list-style-type: none"> 1. Tune at 87.5MHz(87.500MHz), input a 55dB non-modulated SSG signal, and then turn on ST. SW. 2. Connect a frequency counter to TP106 through a 100kΩ resistor and adjust VR105 so that the counter indicates 76kHz. 1. Tune at 87.5MHz(87.500MHz), connect the output of a stereo modulator to the external modulation terminal, and input a 65dB SSG signal. 2. Set the stereo modulator to the L or R ch and adjust VR103 so that the maximum separation is obtained.
SK 1. VCO 2. 57kHz trap (E951 MK II)	VR901 L901	<ol style="list-style-type: none"> 1. Tune at 87.5MHz(87.500MHz), input a 55dB non-modulated SSG signal. 2. Connect the frequency counter to TP901 and adjust VR901 so that the counter indicates 57kHz. 1. Tune at 87.5MHz(87.500MHz), connect the output of the stereo modulator to the external modulation terminal, and then input a 55dB SSG signal. 2. Turn on SK. SW. of stereo modulator. 3. Adjust L901 so that the wave-form of pin 2 (TP902) of STK2200 is maximized.
DK VCO (E951 MK II)	VR902	<ol style="list-style-type: none"> 1. Tune at 87.5MHz(87.500Hz), input a 55dB non-modulated SSG signal, and turn on VF. SW. 2. Connect the frequency counter to TP903 through a 22kΩ resistor and adjust VR902 so that the counter indicates 125Hz. In the case, 25sec later, seeking occurs.
Dolby NR	VR306 and VR307	Insert a Dolby level test tape (400Hz-200nWb/m), connect the millivoltmeter to TP301 and TP302, and adjust VR306 and VR307 to obtain an output of 300mV.

[NOTE] After the adjustment of frequency range, be sure that:
 (1) Band edge frequency of LW shall be 148.5kHz -20kHz

(2) Band edge frequency of UKW shall be 87.5MHz +100kHz -160kHz
 at low end. And shall be lower than 108.16MHz at upper end.

- SPECIFICATION -LIMIT- Quieting sensitivity: MW Less than 33dB(at 20dB S/N)
 LW Less than 39dB(at 20dB S/N)
 UKW Less than 12dB(at 30dB S/N)
 Stereo separation: UKW More than 20dB

●ADJUSTMENT POINT

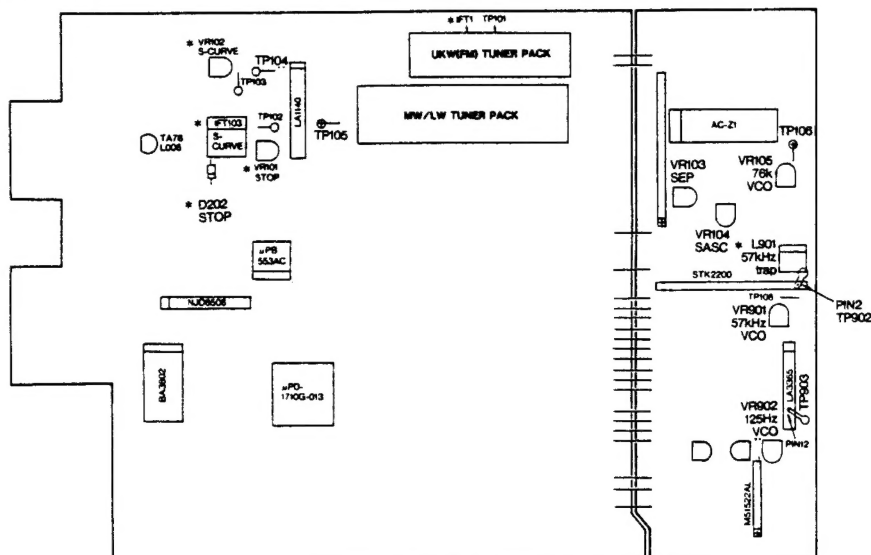

■ ADJUSTMENT:

< TAPE MECHANISM >

1. AZIMUTH ADJUSTMENT

Play the 6.3kHz, -10VU section of the AZIMUTH tape and adjust the head azimuth adjustment screw (716-0429-00) so that the output levels are maximized in both tape running directions. (Figure 1)

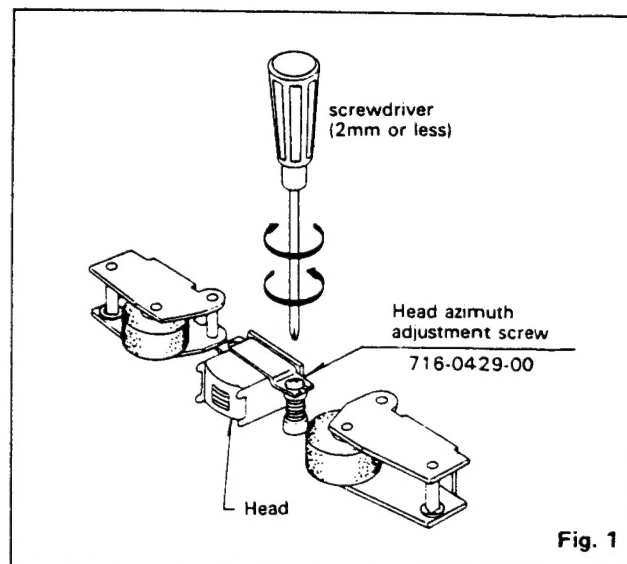


Fig. 1

2. FF/REW GEAR ENGAGEMENT ADJUSTMENT

If any abnormal sound is heard during FF/REW operation, adjust gear engagement as follows.

First identify the gear causing the abnormal sound. Then, adjust projection of the reel base plate ass'y by bending it in an appropriate direction as shown in Fig. 2; (A) when the FF gear causes abnormal sound; (B) when the REW gear causes abnormal sound.

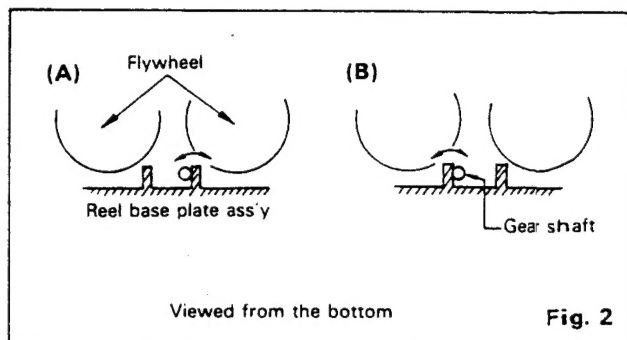


Fig. 2

3. IDLER GEAR ENGAGEMENT ADJUSTMENT

If any abnormal sound is heard during PLAY operation, adjust gear engagement as follows. First identify the gear causing the abnormal sound. Then, adjust projection of the roller plate A ass'y by bending it in an appropriate direction as shown in Fig. 3; (A) when the FWD gear causes abnormal sound; (B) when the REV gear causes abnormal sound.

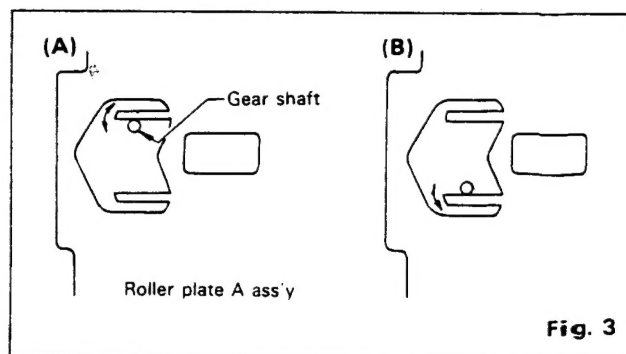


Fig. 3

4. LEAF SWITCH POSITION ADJUSTMENT

When replacing the leaf switch, first remove P.W.B from the mechanism, remove the solder on the leaf switch, adjust the position of the leaf switch from the P.W.B switch position adjustment hole, and then solder the switch. (Figure 4)

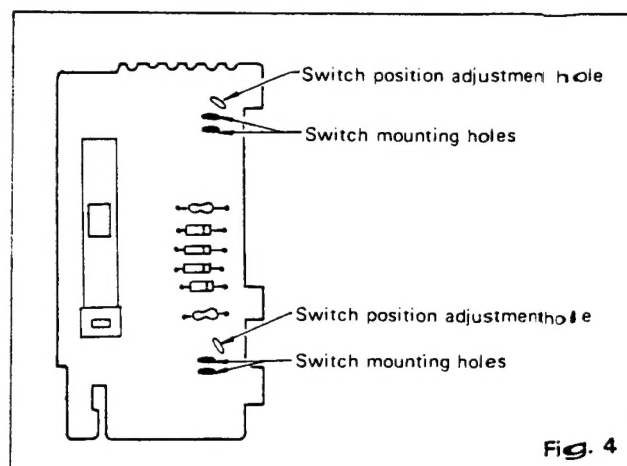


Fig. 4

● SPECIFICATION —LIMIT— Wow and flutter: Less than 0.25%(W.R.M.S)

PARTS LIST:

©Electrical section

©MAIN - FM-MPX P.W.B

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
D ^{101-104,201 202,110 501-506 508-511,514 515,702-704 903-906,908}	001-0330-00	Diode (1SS119)	27
D ₃₀₃	001-0333-31	Diode (MA2082B)	1
D ₇₀₅	001-0347-32	Diode (MA4056M)	1
D _{301,512}	001-0347-45	Diode (MA4082H)	2
D ₅₁₃	001-0347-47	Diode (MA4091M)	1
D ₇₀₁	001-0347-49	Diode (MA4100L)	1
D _{706,901}	001-0361-00	Diode (1SS198)	2
D ₁₀₅	001-0401-15	Diode (HZS3.0EB2-TE)	1
TH ₁₀₁	002-0184-00	Thermistor (30kΩ)	1
IFT ₁₀₃	005-0844-01	IF-transformer	1
IFT _{101,102}	005-0865-01	IF-transformer	2
L _{102,501}	010-1180-00	Coil	2
L ₁₀₁	010-1708-00	Coil	1
L ₉₀₁	010-1853-01	Coil	1
L ₂₀₁	010-1904-06	Coil	1
VR ₁₀₄	012-3808-05	Variable resistor (4.7kΩ)	1
VR _{101,103 901,902}	012-3808-06	Variable resistor (10kΩ)	4
VR _{306,307}	012-3808-09	Variable resistor (47kΩ)	2
VR ₁₀₂	012-3808-11	Variable resistor (220kΩ)	1
VR ₁₀₅	012-4101-16	Variable resistor (15kΩ)	1
CCT ₅₀₁	050-0077-00	Component circuit (47kΩx4)	1
IC ₃₀₂	051-0267-55	IC (μPD4066BG)	1
IC ₅₀₆	051-0281-01	IC (μPB553AC)	1
IC ₇₀₁	051-0296-00	IC (TA78L006)	1
IC ₃₀₁	051-0301-02	IC (M51522AL)	1
IC ₅₀₂	051-0306-00	IC (TD62105P)	1
IC ₅₀₅	051-0329-00	IC (TD62508P)	1
IC ₁₀₁	051-0363-00	IC (LA1140)	1
IC ₆₀₂	051-0409-00	IC (BA634)	1
IC ₁₀₃	051-0463-00	IC (μPD1256C, ACZ1)	1
IC ₁₀₂	051-0467-00	IC (HIC)	1
IC _{507,904}	051-0478-00	IC (NJD6506S)	2
IC ₉₀₂	051-0501-00	IC (LA3365)	1
IC ₉₀₁	051-0502-00	IC (STK2200)	1
IC ₅₀₄	051-0504-00	IC (BA3802)	1
IC ₅₀₃	051-0509-01	IC (μPD1710G013-03)	1
IC ₃₀₅	051-0523-00	IC (NR9200)	1
IC ₆₀₁	051-0561-00	IC (AN6263)	1
IC ₅₀₁	051-0565-00	IC (M54562P)	1
IC ₉₀₃	051-0579-00	IC (BA222)	1
X ₅₀₁	061-1037-00	Crystal (4.5MHz)	1
Q ₉₀₁	100-1020-15	Transistor (2SA1020-O)	1
Q _{505,911}	100-1175-49	Transistor (2SA1175-THF)	2
Q _{705,910}	101-0911-18	Transistor (2SB911MR)	2
Q ^{102-105,301 302,314,315,501 502,701 903-909}	102-2458-25	Transistor (2SC2458Y)	18
Q _{305,306,702,703}	102-2458-28	Transistor (2SC2458GRTPE4)	4
Q ₁₀₁	102-2786-12	Transistor (2SC2786-TLF)	1

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
Q ₆₀₁₋₆₀₄	102-3400-00	Transistor (2SC3400AC)	4
Q _{503,504}	103-0571-12	Transistor (2SD571L)	2
Q ₇₀₄	103-1020-69	Transistor (2SD1020-TH/F)	1
Q _{106,107,303,304}	103-1450-20	Transistor (2SD1450T-T)	4
R ₁₂₃	032-0059-06	Film resistor (33kΩ)	1
R ₁₁₇	032-0059-08	Film resistor (100kΩ)	1
R ₁₁₆	032-0059-49	Film resistor (5.6kΩ)	1
R ₅₂₉	032-0072-01	Film resistor (5W22Ω)	1
R ₅₂₃	111-4791-81	Film resistor (½W4.7Ω)	1
R ₃₇₉	114-1011-11	Film resistor (1W100Ω)	1
C ₅₀₇	160-1012-05	Ceramic capacitor (100pF B)	1
C _{112,508}	160-1022-05	Ceramic capacitor (1000pF B)	2
C ₁₁₃	160-1512-05	Ceramic capacitor (150pF B)	1
C ₁₂₅	160-1522-05	Ceramic capacitor (1500pF B)	1
C ₁₂₁	160-8212-05	Ceramic capacitor (820pF B)	1
C _{301,302}	171-1023-06	Ceramic capacitor (1000pF SR)	2
C ^{103-107,111 118,133,205,505 516,704,709}	171-1033-06	Ceramic capacitor (0.01μF SR)	13
C ₁₃₁	171-1533-06	Ceramic capacitor (0.015μF SR)	1
C ₉₀₁	171-2223-06	Ceramic capacitor (0.0022μF SR)	1
C _{135,136,309,310 517,601,706}	171-2233-06	Ceramic capacitor (0.022μF SR)	7
C _{102,109,602}	171-4733-06	Ceramic capacitor (0.047μF SR)	3
C _{307,308}	171-6823-06	Ceramic capacitor (0.0068μF SR)	2
C ₁₂₈	174-1000-13	Ceramic capacitor (10pF CH)	1
C _{502,503}	174-2200-13	Ceramic capacitor (22pF CH)	2
C ₁₃₂	174-2210-13	Ceramic capacitor (220pF CH)	1
C ₉₀₆	174-3610-37	Ceramic capacitor (360pF RH)	1
C ₁₀₁	174-7090-13	Ceramic capacitor (7pF CH)	1
C ₉₀₄	043-0174-00	Ceramic capacitor (2200pF)	1
C _{512,710,711,712}	172-1042-20	Polyester capacitor (6.3V0.1μF)	4
C ₂₀₁	173-1042-10	Polyester capacitor (0.1μF)	1
C ₇₀₅	042-0201-00	Electrolytic capacitor (16V3.3μF TAN)	1
C ₉₁₄	042-0249-00	Electrolytic capacitor (16V0.22μF TAN)	1
C _{366,902}	179-2273-22	Electrolytic capacitor (10V220μF)	2
C ₅₁₃	179-3373-33	Electrolytic capacitor (16V330μF)	1
C _{504,905}	179-4773-23	Electrolytic capacitor (10V470μF)	2
C _{320,501}	179-4773-33	Electrolytic capacitor (16V470μF)	2
C ₁₃₀	181-1063-32	Electrolytic capacitor (16V10μF LN)	1
C ^{117,122,129,137 138,139,303,304 315,314,901,908 913}	182-1053-62	Electrolytic capacitor (50V1μF)	13
C ₁₂₀	182-1056-62	Electrolytic capacitor (50V1μF NP)	1
C ₉₁₀	182-1063-32	Electrolytic capacitor (16V10μF)	1
C ₉₀₇	182-1073-02	Electrolytic capacitor (4V100μF)	1
C ^{311,367,514,515 707,708}	182-1073-22	Electrolytic capacitor (10V100μF)	6
C ₁₂₄	182-2243-62	Electrolytic capacitor (50V0.22μF)	1
C ₁₁₆	182-2246-62	Electrolytic capacitor (50V0.22μF NP)	1
C ₉₁₂	182-3363-02	Electrolytic capacitor (4V33μF)	1
C ₁₂₇	182-3363-22	Electrolytic capacitor (10V33μF)	1
C _{132,134}	182-4743-62	Electrolytic capacitor (50V0.47μF)	2
C _{903,909}	182-4753-52	Electrolytic capacitor (35V4.7μF)	2

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
C115	182-4756-32	Electrolytic capacitor (16V4.7 μ F NP)	1
C305,306	182-4763-12	Electrolytic capacitor (6.3V47 μ F)	2
C126,905,911	182-4763-42	Electrolytic capacitor (25V47 μ F)	3
C203,603	183-1043-62	Electrolytic capacitor (50V0.1 μ F)	2
C114,315,316,318,319	183-1053-62	Electrolytic capacitor (50V1 μ F)	5
C312,506,509,511,604,701,904	183-1063-32	Electrolytic capacitor (16V10 μ F)	7

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
C703	183-2253-62	Electrolytic capacitor (50V2.2 μ F)	1
C317,906	183-2263-32	Electrolytic capacitor (16V22 μ F)	2
C702	183-3343-62	Electrolytic capacitor (50V0.33 μ F)	1
C903	183-3363-22	Electrolytic capacitor (10V33 μ F)	1
C108,119	183-4743-62	Electrolytic capacitor (50V0.47 μ F)	2
C110,510,518,902	183-4753-52	Electrolytic capacitor (35V4.7 μ F)	4

◎AUDIO P.W.B

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
D302	001-0360-00	Diode (S5566B)	1
VR308	012-3808-04	Variable resistor (3.3k Ω)	1
IC304	051-0444-04	IC (TA7240AP)	1
IC303	051-0444-06	IC (TA7241AP)	1
IC306	051-0606-00	IC (BT3S501)	1
Q309-313	102-2458-25	Transistor (2SC2458Y)	5
Q315	103-1450-20	Transistor (2SD1450T)	1
C359,360,362,363	043-0122-00	Ceramic capacitor (12V0.3 μ F)	4
C358,361	043-0165-01	Ceramic capacitor (12V0.1 μ F)	2
C341,342	171-3323-06	Ceramic capacitor (0.0033 μ F B)	2
C333,334	171-6823-06	Ceramic capacitor (0.0068 μ F SR)	2
C365	172-1042-20	Polyester capacitor (63V0.1 μ F)	1

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
C354,356	173-1042-10	Polyester capacitor (50V0.1 μ F)	2
C332,337	179-1063-32	Electrolytic capacitor (16V10 μ F)	2
C345,347,350,353,355,357	179-1073-22	Electrolytic capacitor (10V100 μ F)	8
C364	179-2283-31	Electrolytic capacitor (16V2200 μ F)	1
C348,349	179-4763-22	Electrolytic capacitor (10V47 μ F)	2
C318,319,344,345	182-1053-62	Electrolytic capacitor (50V1 μ F)	4
C327,328	182-1063-32	Electrolytic capacitor (16V10 μ F)	2
C331	182-1073-32	Electrolytic capacitor (16V100 μ F)	1
C335,339	182-2243-62	Electrolytic capacitor (50V0.22 μ F)	2
C390	182-2263-32	Electrolytic capacitor (16V22 μ F)	1
C329,330,336,338	182-4753-52	Electrolytic capacitor (35V4.7 μ F)	4

◎MECHANISM P.W.B


REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
D401-409	001-0112-00	Diode (1S1588)	9
IC401	051-0403-01	IC (TD6308AP)	1
Q401	102-1815-25	Transistor (2SC1815Y)	1









REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
C404	179-3373-33	Electrolytic capacitor (16V330 μ F)	1
C401,402	182-1063-32	Electrolytic capacitor (16V10 μ F)	2
C403	182-4743-62	Electrolytic capacitor (50V0.47 μ F)	1

● How to read resistor


Resistors are deleted from the table of electric components, (except metal film resistors and special resistors). They can be converted to product Nos. as follows.

Film resistor (Carbon film resistor)



Classification	Resistance *	Tolerance of the value of resistance		Rated power			Shape	
1 1 1		0		0			0	
	Example	1	± 5 %	1	¼ W		Approx. 3.7mm	1 Horizontal 
	33Ω = 330	2		2	¼ W s		Approx. 6.5mm	2 Vertical 
	33kΩ = 333	3		3				3
		4		4	½ W		Approx. 9mm	4
				7	⅛ W		Approx. 3.5mm	
				8	½ W s		Approx. 6.6mm	
				9	¼ W ss		Approx. 3.2mm	

(Example)

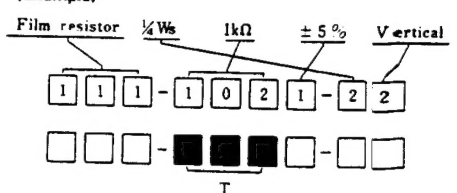

Note 1. The first two of three digits representing resistance are effective digits and the last one represents number of "0" following this.
Unit is given in ohm (Ω).


Example of conversion of resistance

Note) R : Resistance, T : Converted value

R	T	R	T	R	T	R	T	R	T	R	T	R	T	R	T	R	T	R	T
0.1	10R	1.0	10R	10	100	100	101	1.0	102	10	103	100	104	1.0	105	10	106	100	107
0.15	15R	1.5	15R	15	150	150	151	1.5	152	15	153	150	154	1.5	155	15	156	150	157

COLOR	BLK	BRN	RED	ORG	YEL	GRN	BLU	PUR	GRY	WHT	GOLD	SILVER	NO COLOR
1st color band	0	1	2	3	4	5	6	7	8	9			
2nd color band	0	1	2	3	4	5	6	7	8	9			
3rd color band	10 ⁰	10 ¹	10 ²	10 ³	10 ⁴	10 ⁵	10 ⁶				10 ⁻¹	10 ⁻²	
4th color band											$\pm 5\%$ (J)	$\pm 10\%$ (K)	$\pm 20\%$ (M)

*

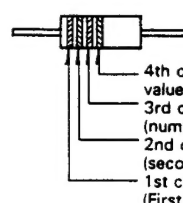


Resistor

E951 MK II
E950 MK II

EXPLODED VIEW • PARTS LIST:

◎Main section

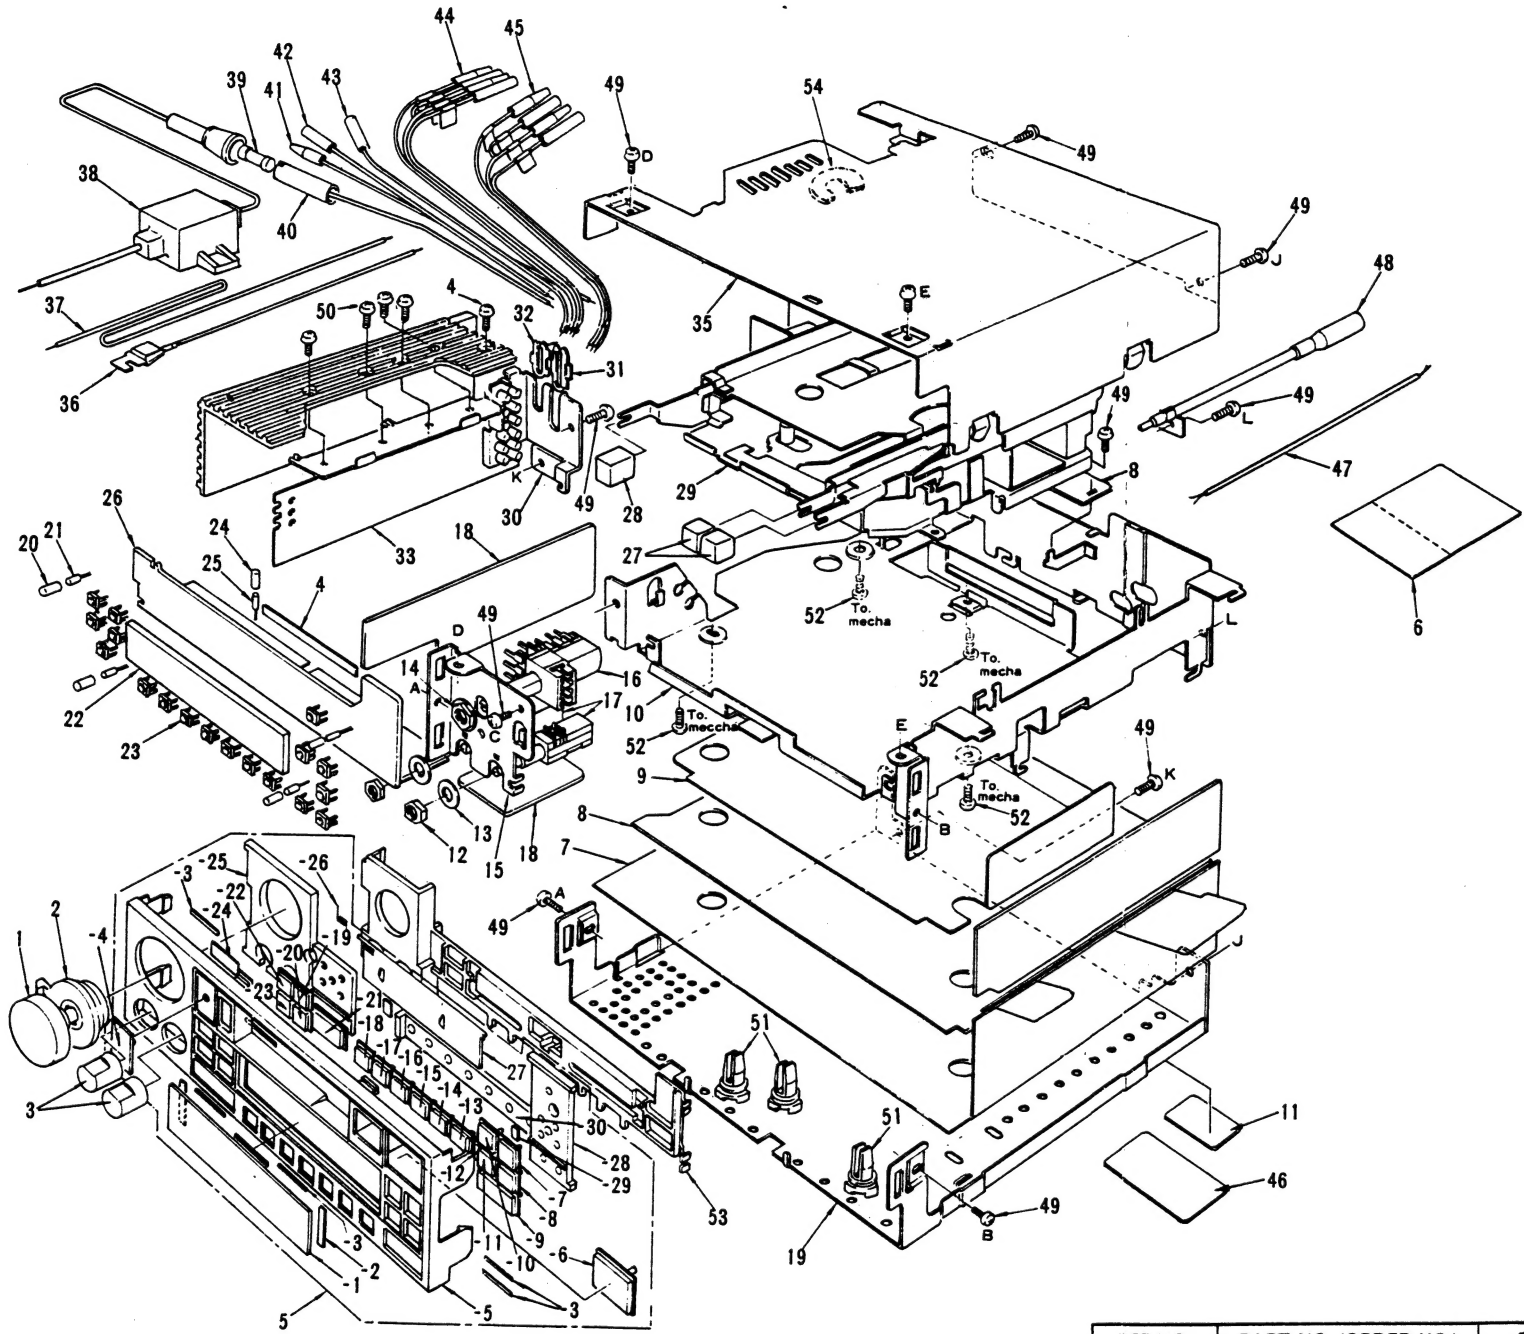

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
1	380-4293-01	Knob (VOL)	1
2	380-4295-00	Knob (FAD)	1
3	380-4294-01	Knob (BASS, TREB)	2
4	714-3006-89	Machine screw (M3x8)	1
5	940-2808-00 940-2808-01	Escutcheon (E951) ass'y (E950)	1
5-1	373-0364-12	Dial cover	1
5-2	347-0645-00	Adhesive paper	2
5-3	347-0815-00	Adhesive paper	6
5-4	378-0088-00	Badge	1
5-5	370-3561-04	Escutcheon	1
5-6	382-0508-00	Button (PRO)	1


REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
5-7	382-0509-03	Button (L/M/U)	1
5-8	382-0509-00	Button (ST)	1
5-9	382-0511-00	Button (< >)	1
5-10	382-0509-01 382-0507-00	Button (VF) Dummy button (E950)	1
5-11	382-0507-00	Dummy button	1
5-12	382-0510-00	Button (M)	1
5-13	382-0510-06	Button (6)	1
5-14	382-0510-05	Button (5)	1
5-15	382-0510-04	Button (4)	1
5-16	382-0510-03	Button (3)	1
5-17	382-0510-02	Button (2)	1

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
5-18	382-0510-01	Button (1)	1
5-19	382-0509-07	Button (MTL)	1
5-20	382-0509-06	Button (APC)	1
5-21	382-0511-01	Button (> >)	1
5-22	382-0509-04	Button (LD)	1
5-23	382-0509-02	Button (LD)	1
5-24	347-0872-00	Adhesive paper	1
5-25	371-3078-01	Trim plate	1
5-26	750-2309-01	Spring	1
5-27	320-0328-45 320-0328-46	Dustproof (E951) cover (E950)	1
5-28	371-3077-01	Trim plate	1
5-29	347-0772-00	Adhesive paper	2

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
5-30	371-3079-02	Trim plate	1
6	285-1096-01	Guide label	1
7	347-1244-02	Insulator	1
8	099-7151-01	P.W.B	1
9	347-1217-01	Insulator	1
10	312-0231-03	Chassis	1
11	286-5384-00 286-5385-00	Set plate (E951) (E950)	1
12	722-0332-00	Hex-nut	2
13	745-0560-00	Flat washer	2
14	722-0417-00	Nut	1
15	330-7674-01	VR bracket	1
16	012-4068-00	Variable resistor (VOL)	1
17	012-4070-00	Variable resistor (BASS, TREB)	2
18	099-7190-00	P.W.B	1
19	304-0357-03	Lower cover	1
20	345-3619-00	P.L cap	4
21	017-0338-06	Pilot lamp	4
22	379-0051-16	Indicator	1
23	013-3694-00	Switch	18
24	345-2830-07	P.L cap	1
25	017-0349-00	Pilot lamp	1
26	099-6814-01	P.W.B	1
27	382-0506-01	Button (◀)	2
28	382-0505-01	Button (↶)	1
29	930-0514-01 930-0514-00	Tape mechanism (E951) (E950)	1
30	944-0650-03	Filter ass'y	1
31	335-0818-00	Lead holder	1
32	335-0580-00	Lead holder	1
33	347-1359-00	Insulator	1
34	313-1184-00	Heat sink	1
35	310-1125-03	Upper case	1
36	840-0386-00	Bonding wire	1
37	850-2110-02	A-lead	1
38	009-0626-13	Choke	1
39	120-0070-00	Fuse (7A)	1
40	850-2225-00	A-lead	1
41	850-1580-02	A-lead	1
42	852-5322-02	Extension lead	1
43	852-6652-01	Extension lead	1
44	851-2442-02	Speaker lead (Gray)	1
45	851-2443-03	Speaker lead (White)	1
46	285-0915-00	Guide label	1
47	815-2061-00	Head lead wire	1
48	092-0522-06	Antenna receptacle	1
49	731-3006-80	Tap tight (M3x)	11
50	714-3010-81	Machine screw (M3x10)	4
51	335-1603-00	Bush	3
52	714-3003-81	Machine screw (M3x3)	4
53	374-0833-02	Back plate	1
54	345-3826-00	Spacer	1

EXPLODED VIEW • PARTS LIST:

©Tape mechanism section

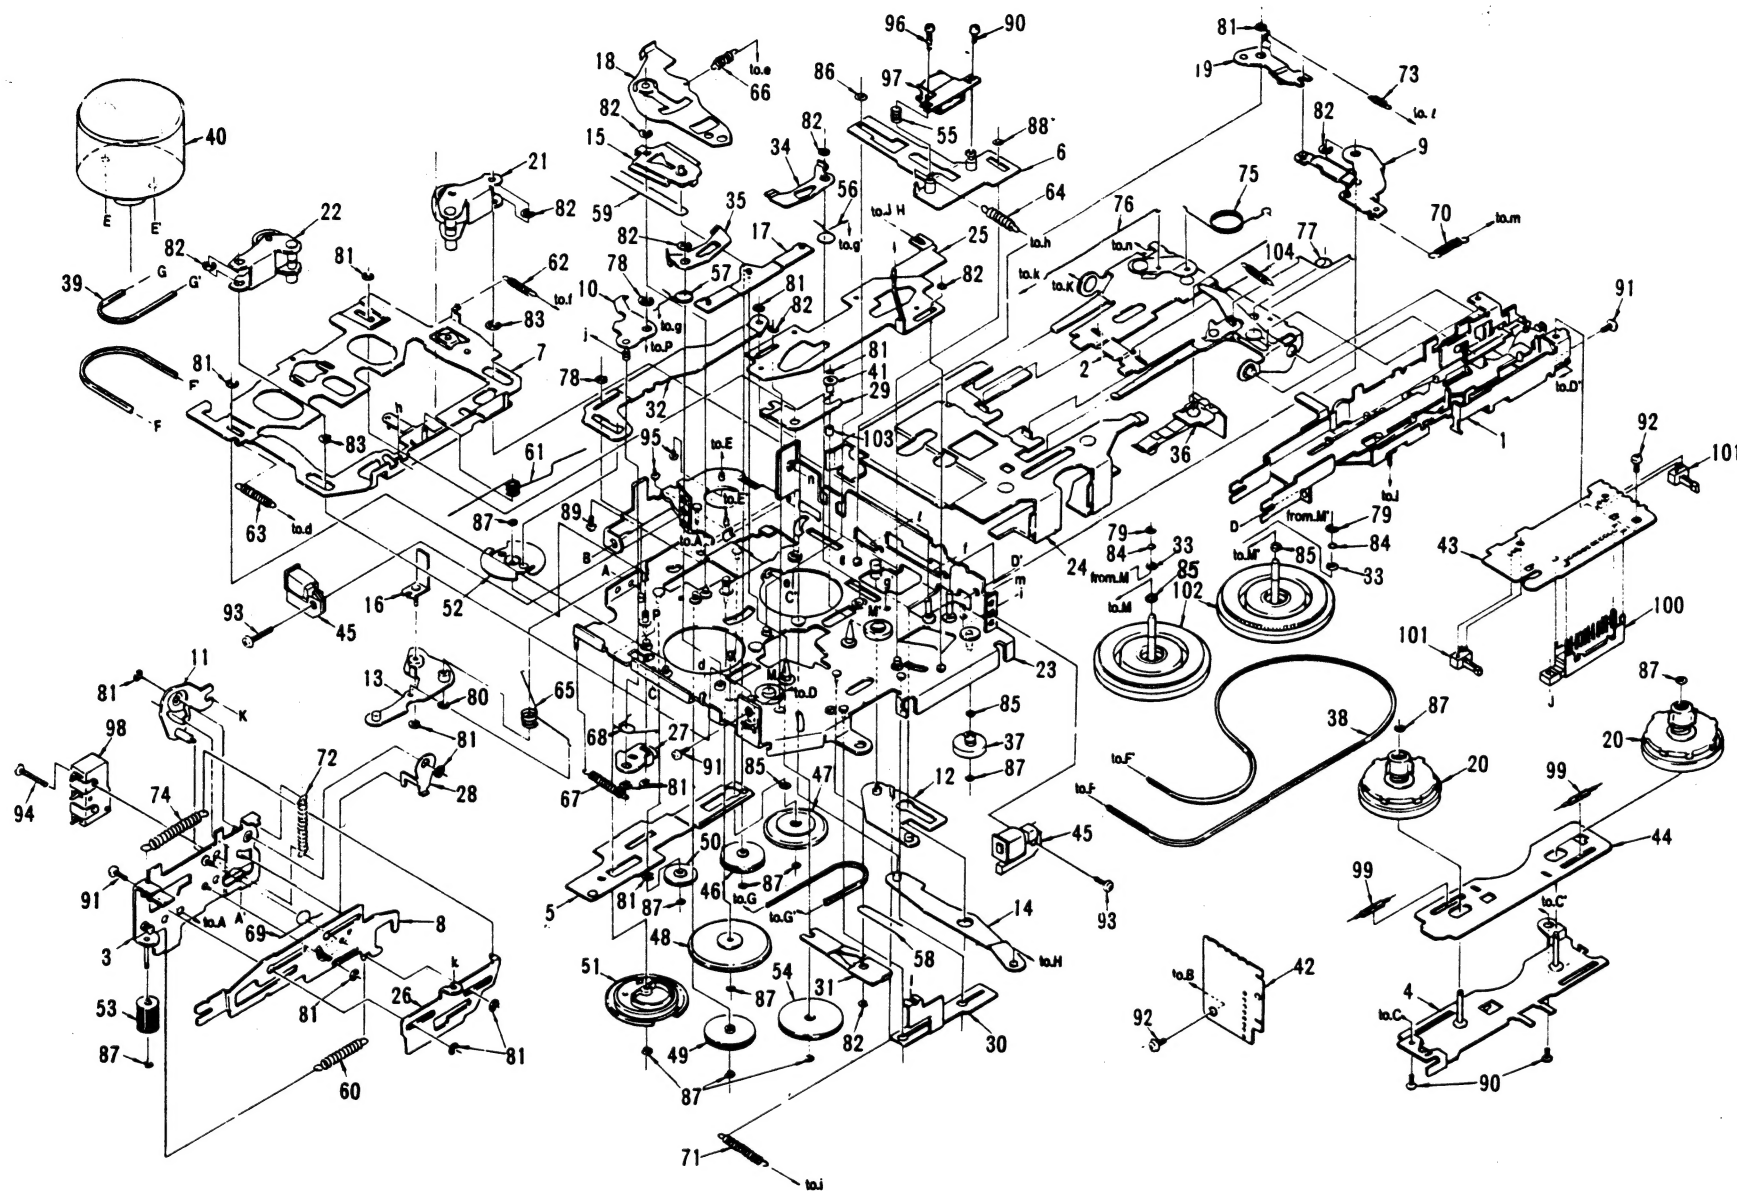

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
1	960-3475-03	Frame sub ass'y	1
2	960-3476-04	Guide arm ass'y	1
3	960-3477-01	Side panel ass'y	1
4	960-3479-01	Reel base-P ass'y	1
5	960-3480-03	Power-P ass'y	1
6	960-3481-01	Head plate ass'y	1
7	960-3482-05	Roller-P-A ass'y	1
8	960-3483-03	E-lever ass'y	1
9	960-3484-00	Plunger-P ass'y	1
10	960-3487-02	C-gear-L-P ass'y	1
11	960-3488-02	Eject link ass'y	1
12	960-3490-03	P-sub-P ass'y	1
13	960-3492-03	Cam-G-L-P ass'y	1
14	960-3493-02	Change arm ass'y	1
15	960-3494-02	Idler-P ass'y	1

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
16	960-3495-00	H-piece-B ass'y	1
17	960-3496-02	FF gear-P ass'y	1
18	960-3497-01	H-P-lock-P ass'y	1
19	960-3498-01	Hold plate ass'y	1
20	960-3499-01	Reel base ass'y	2
21	960-3500-01	Roller-F ass'y	1
22	960-3501-01	Roller-R ass'y	1
23	960-3504-04	Deck plate ass'y	1
24	606-0077-04	Pack guide	1
25	630-1576-02	Change plate	1
26	630-1579-00	Eject plate	1
27	960-3561-00	Timing plate ass'y	1
28	630-1581-01	Switch plate	1
29	630-1582-01	Power line	1
30	630-1583-00	FF plate	1


REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
31	630-1584-01	FF gear arm	1
32	630-1585-00	Idler-C-plate	1
33	746-0730-00	Washer	2
34	630-1587-00	Brake plate-F	1
35	630-1588-00	Brake plate-R	1
36	631-0412-03	Pack stopper	1
37	631-0370-01	Tension pulley	1
38	602-0079-00	Belt	1
39	602-0080-00	Belt	1
40	960-3532-00	Motor ass'y	1
41	610-0242-01	P-roller	1
42	099-6794-00 099-6704-01	P.W.B (E951 MK II) (E950 MK II)	1
43	099-6703-01	P.W.B	1
44	099-6702-01	P.W.B	1
45	015-0232-00	Plunger	2

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
46	613-0044-01	Idler gear	1
47	613-0045-00	Pulley gear	1
48	613-0046-01	Gear A	1
49	613-0047-01	Gear B	1
50	613-0048-01	Gear C	1
51	613-0049-03	Cam gear	1
52	613-0050-02	Channel-C-gear	1
53	613-0051-00	Gear	1
54	613-0052-02	FF gear	1
55	750-1910-00	Azimuth spring	1
56	750-2278-02	Brake-F-spring	1
57	750-2279-02	Brake-R-spring	1
58	750-2281-01	FF-U-spring	1
59	750-2282-03	Idler-U-spring	1
60	750-2283-00	EJ-lever spring	1
61	750-2284-01	P-roller spring	1
62	750-2286-00	Roll-P-A-spring	1
63	750-2287-00	Roll-P-B-spring	1
64	750-2288-00	Head-P-spring	1
65	750-2291-01	Cam-G-spring	1
66	750-2292-00	Head-L-spring	1
67	750-2293-00	Change-G-spring	1
68	750-2294-01	Timing-P-spring	1
69	750-2295-01	Hook arm spring	1
70	750-2296-00	Plunger-P-spring	1
71	750-2297-01	P-sub spring	1
72	750-2298-00	E-link spring	1
73	750-2299-00	P-lock spring	1
74	750-2300-02	E-plate spring	1
75	750-2301-03	Slot in spring	1
76	750-2302-00	Rod spring	1
77	750-2320-00	E-lock spring	1
78	744-0018-01	E-ring	2
79	744-0022-00	E-ring	2
80	743-1200-10	E-ring	1
81	743-1500-10	E-ring	14
82	743-2000-10	E-ring	9
83	743-2500-10	E-ring	2
84	746-0732-00	Washer	2
85	746-0617-00	Washer	6
86	746-0622-01	Washer	1
87	746-0628-01	Washer	12
88	746-0717-01	Washer	1
89	732-2604-11	Sems screw (M2.6x4)	1
90	714-2003-81	Machine screw (M2x3)	3
91	714-2603-81	Machine screw (M2.6x3)	3
92	714-2604-81	Machine screw (M2.6x4)	2
93	714-2606-11	Machine screw (M2.6x6)	2
94	714-2308-81	Machine screw (M2.3x8)	1
95	716-0347-00	Screw	2
96	716-0429-00	Screw	1
97	011-0285-00	Head	1
98	013-3580-00	Switch	1
99	013-3601-00	Switch	2
100	013-3666-00	Switch	1
101	013-3687-00	Switch	2
102	611-0067-00	Fly wheel	2
103	610-0259-00	P-roller B	1
104	750-2369-00	Kick plate spring	1

951 MK II
950 MK II


CIRCUIT DIAGRAM:

●E951 MK II (PE-9046A)

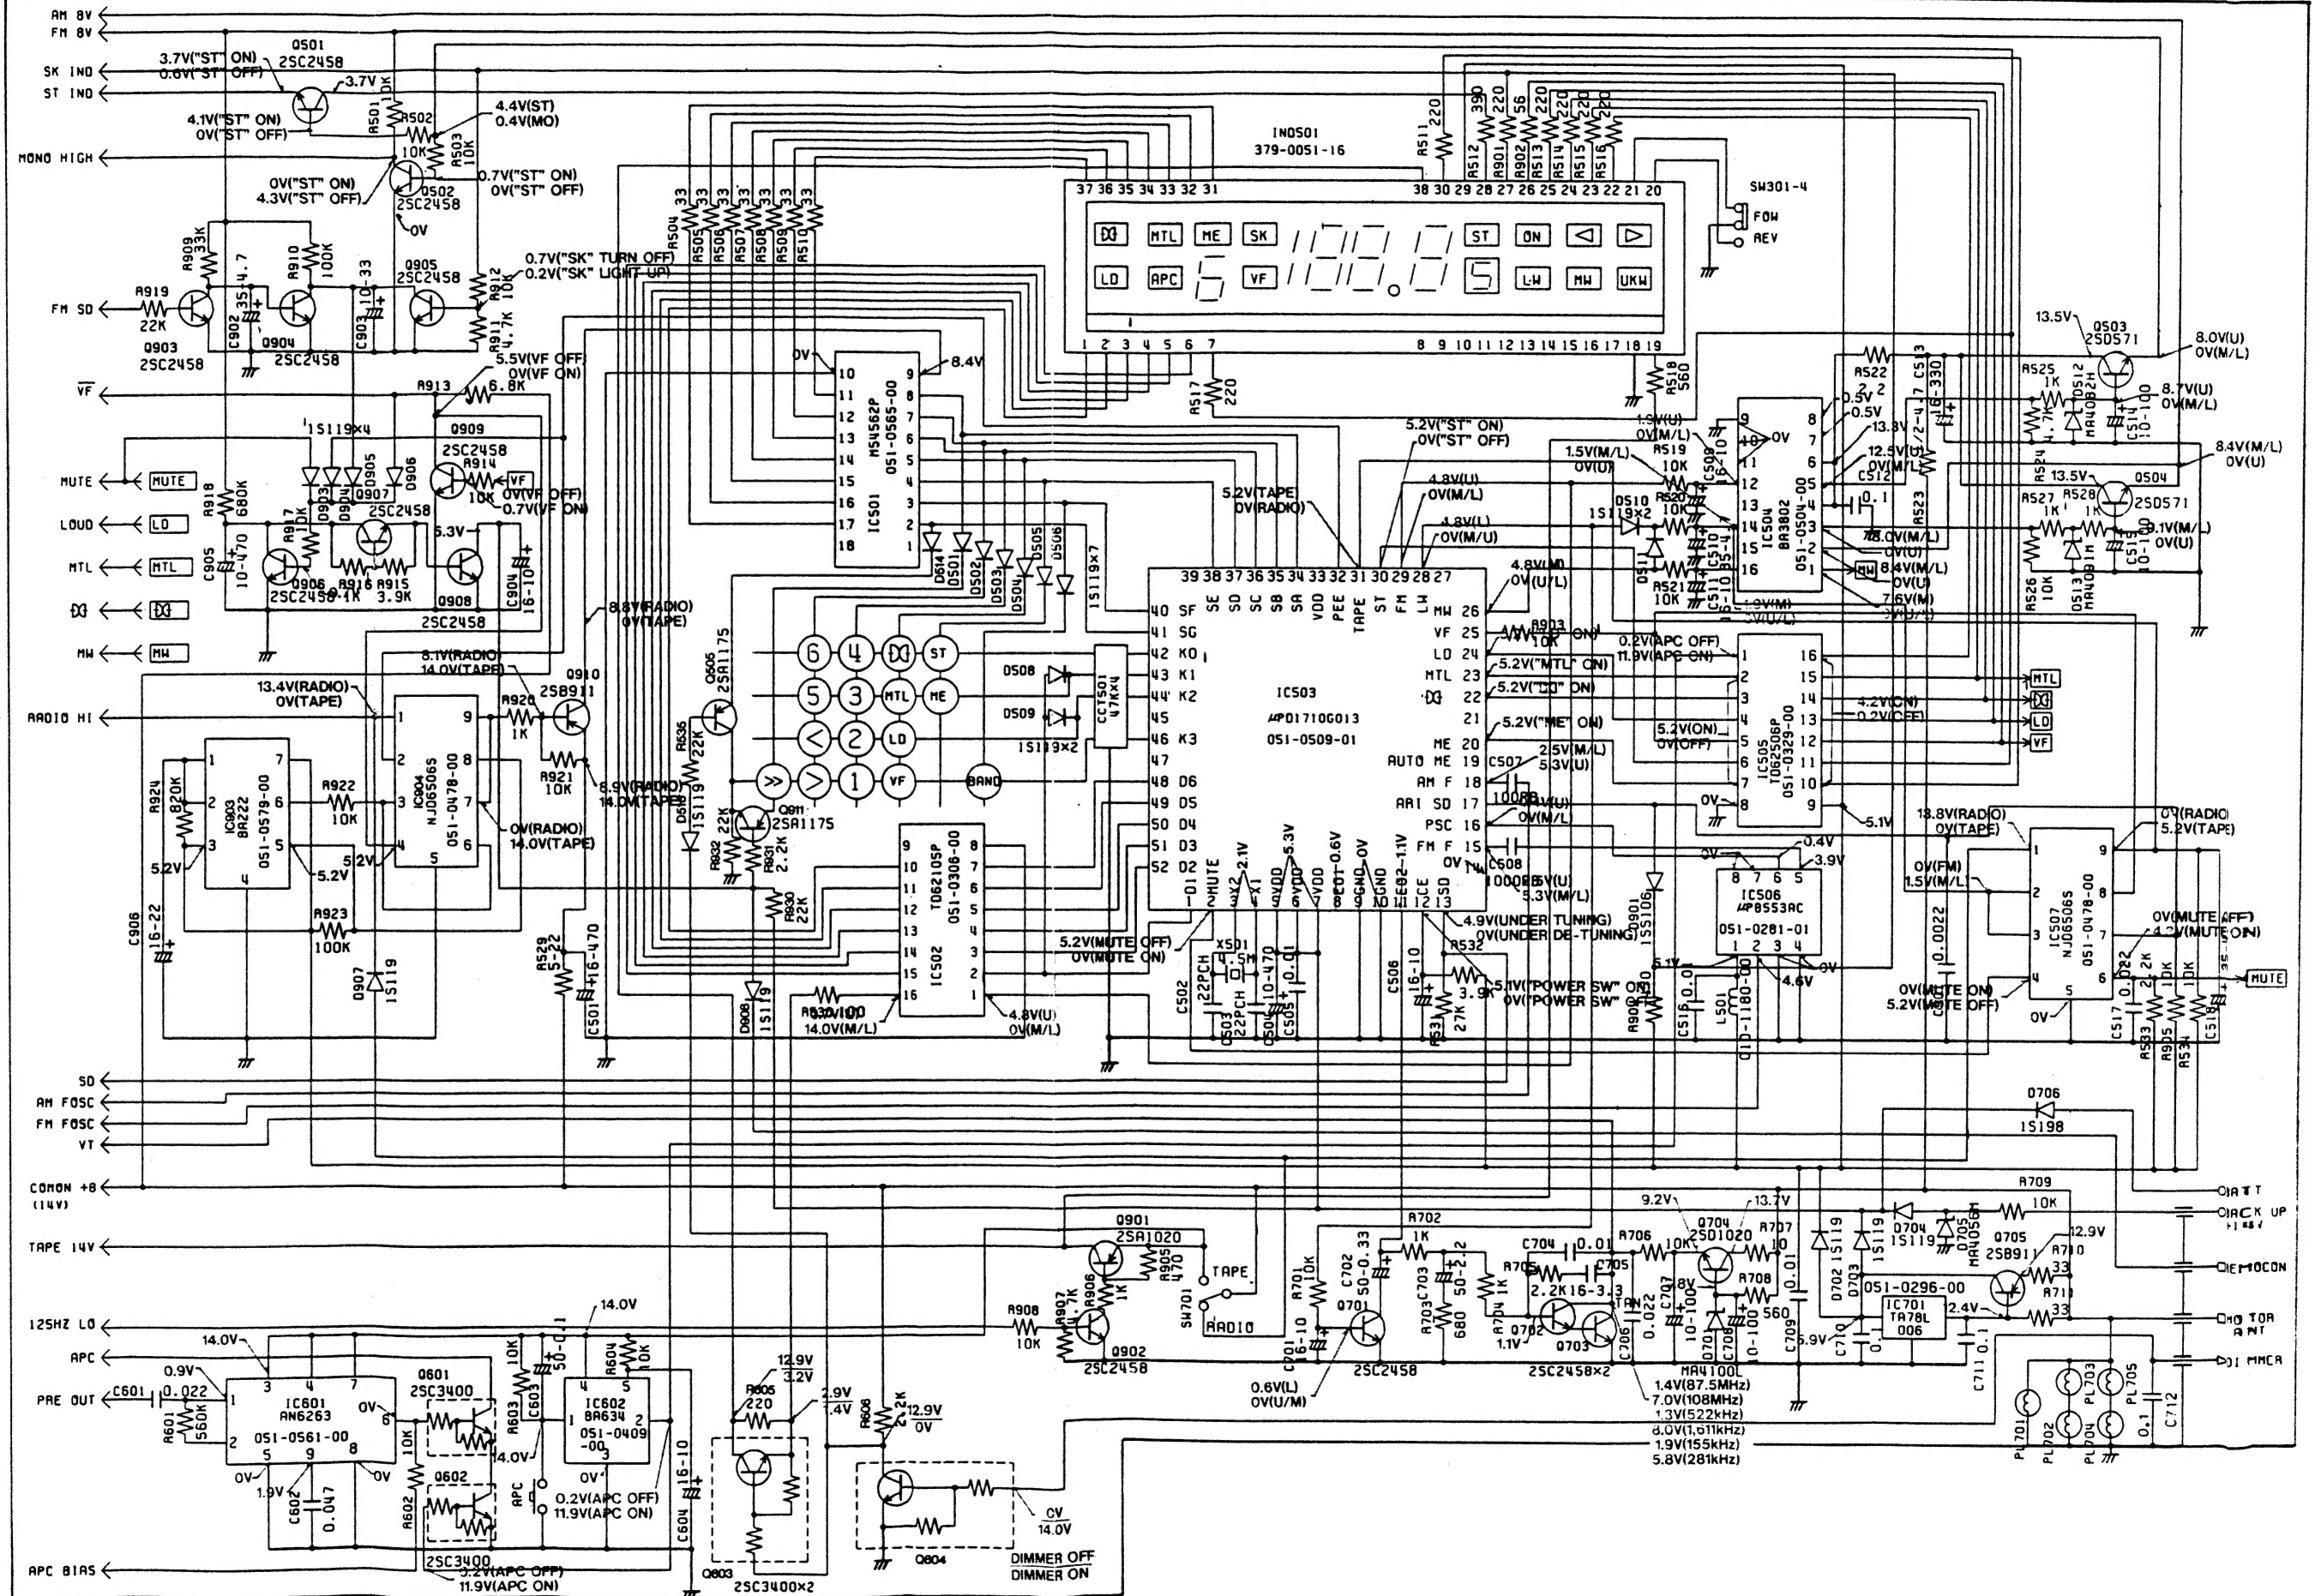


PRINTED WIRING BOARD:

• E951 MK II (PE-9046A)

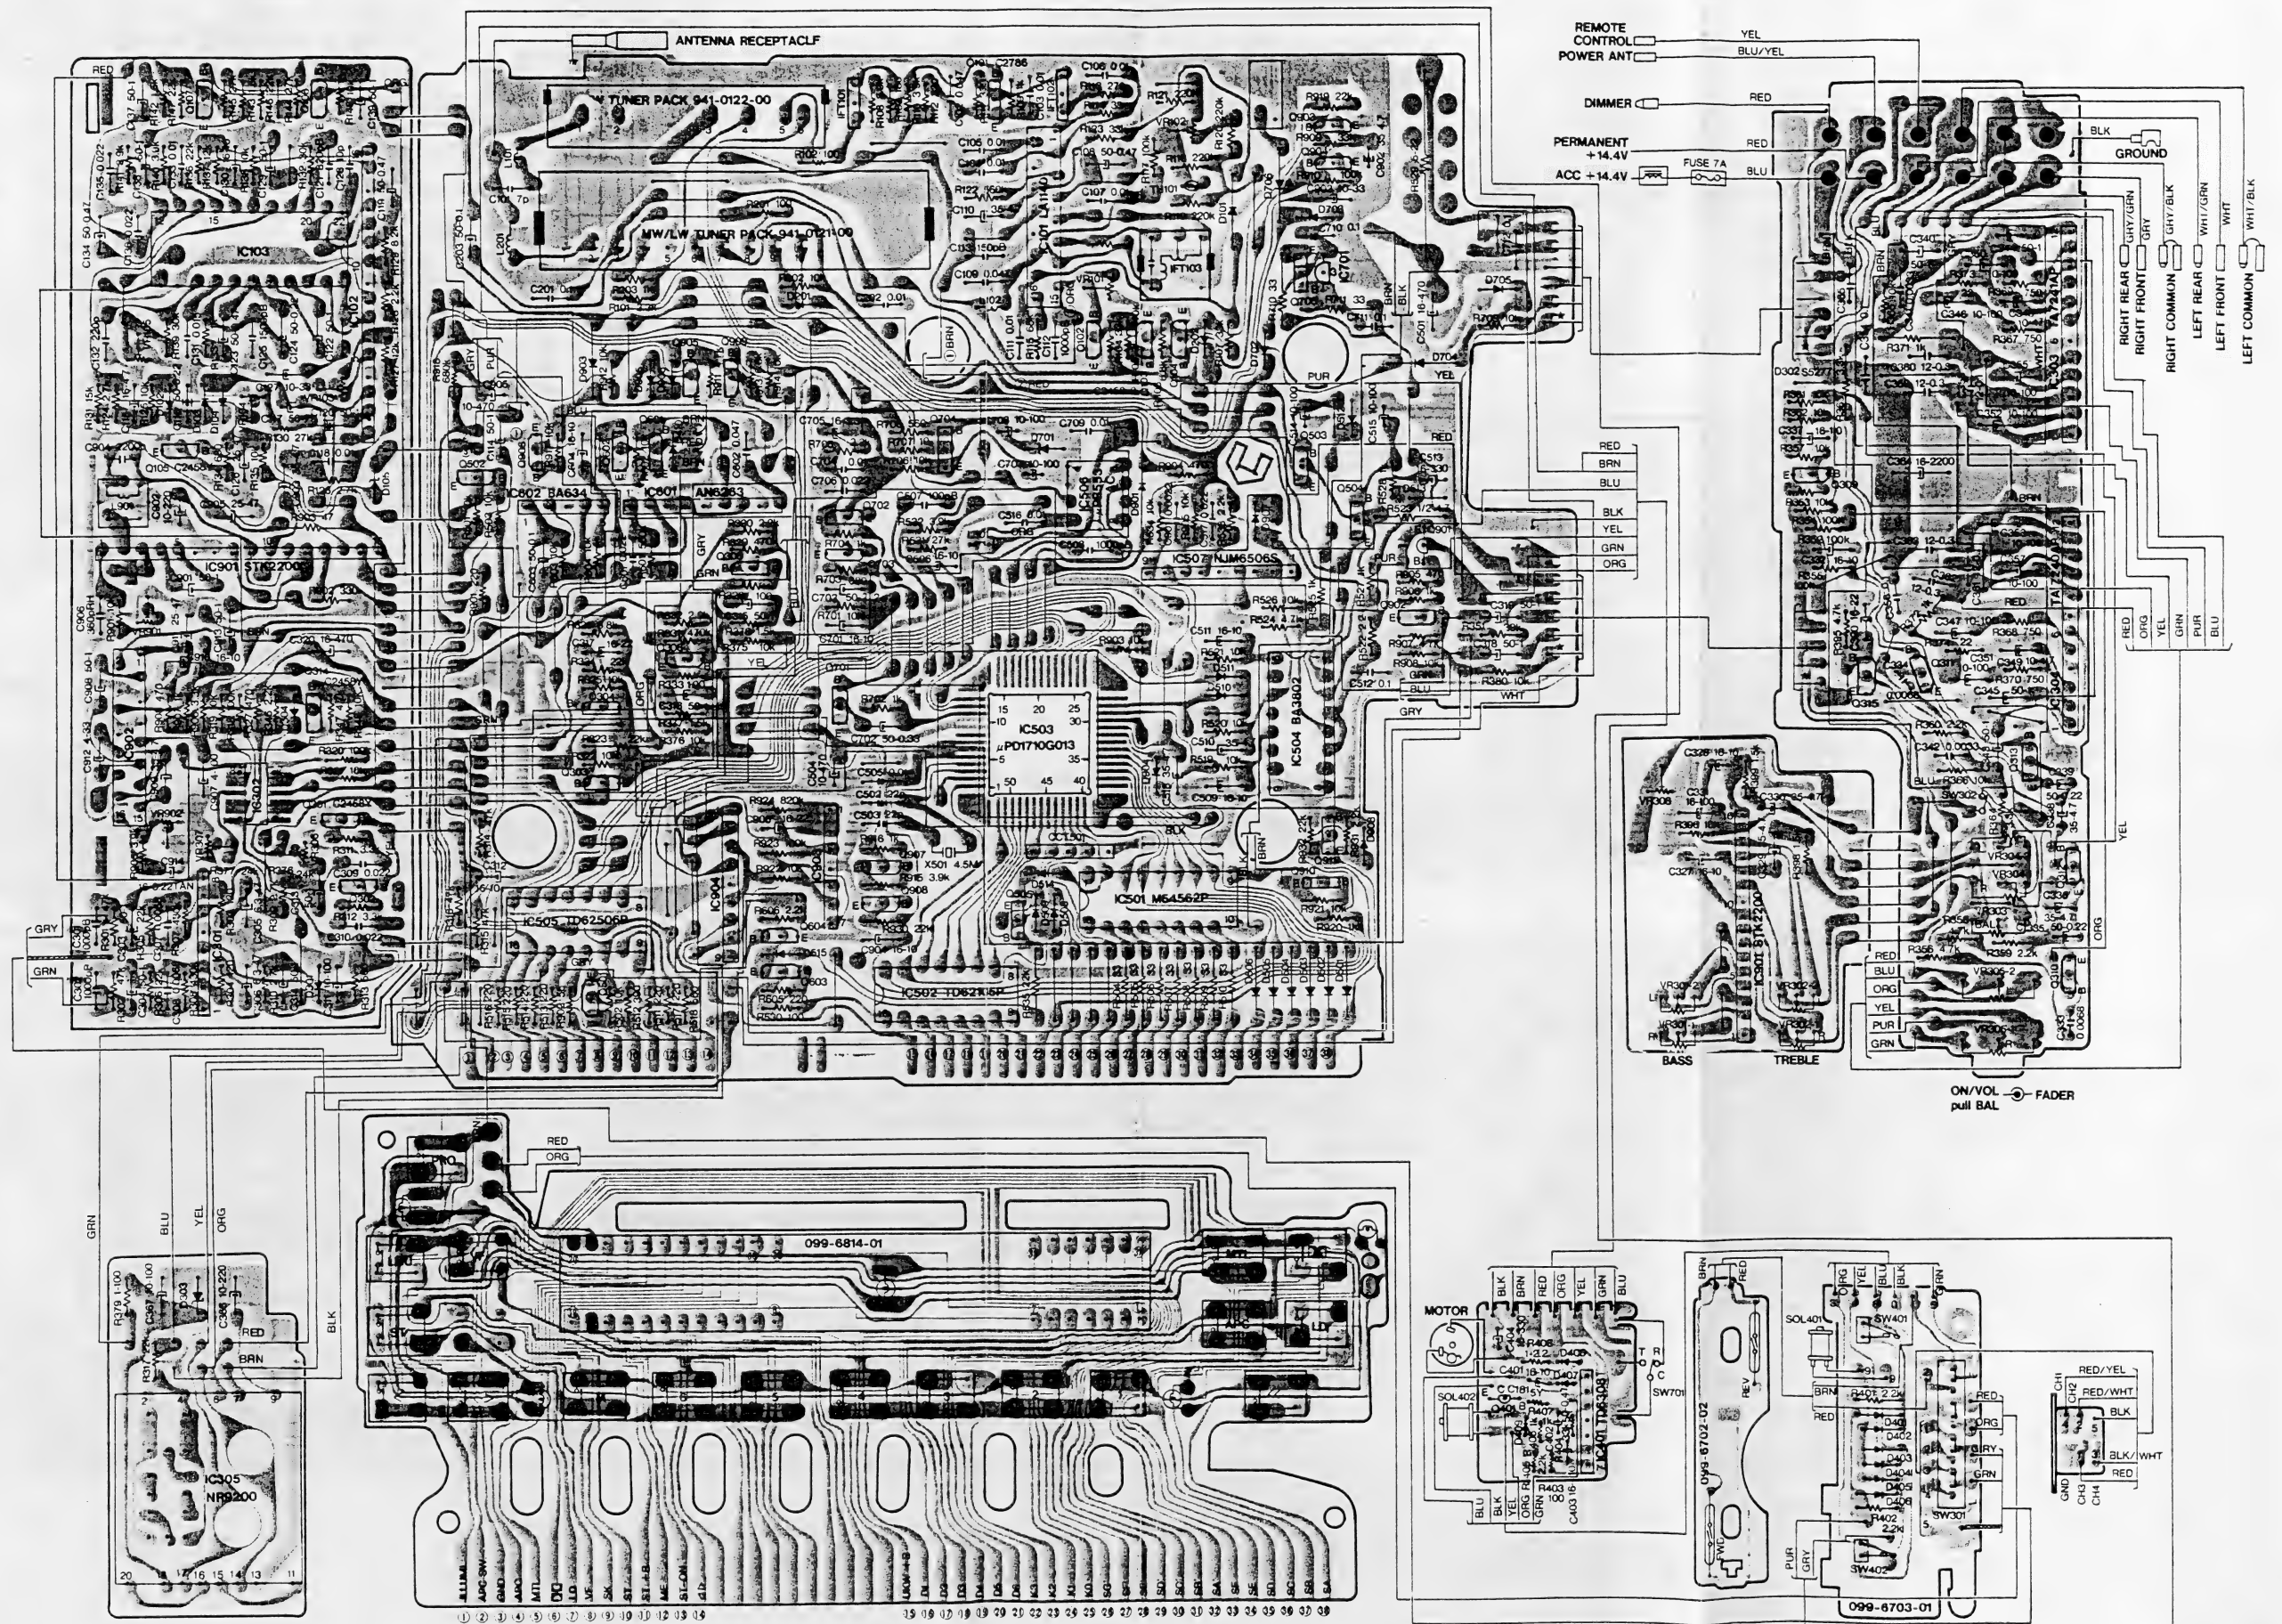


CIRCUIT DIAGRAM:

• E950-MK II (PE-9047A)

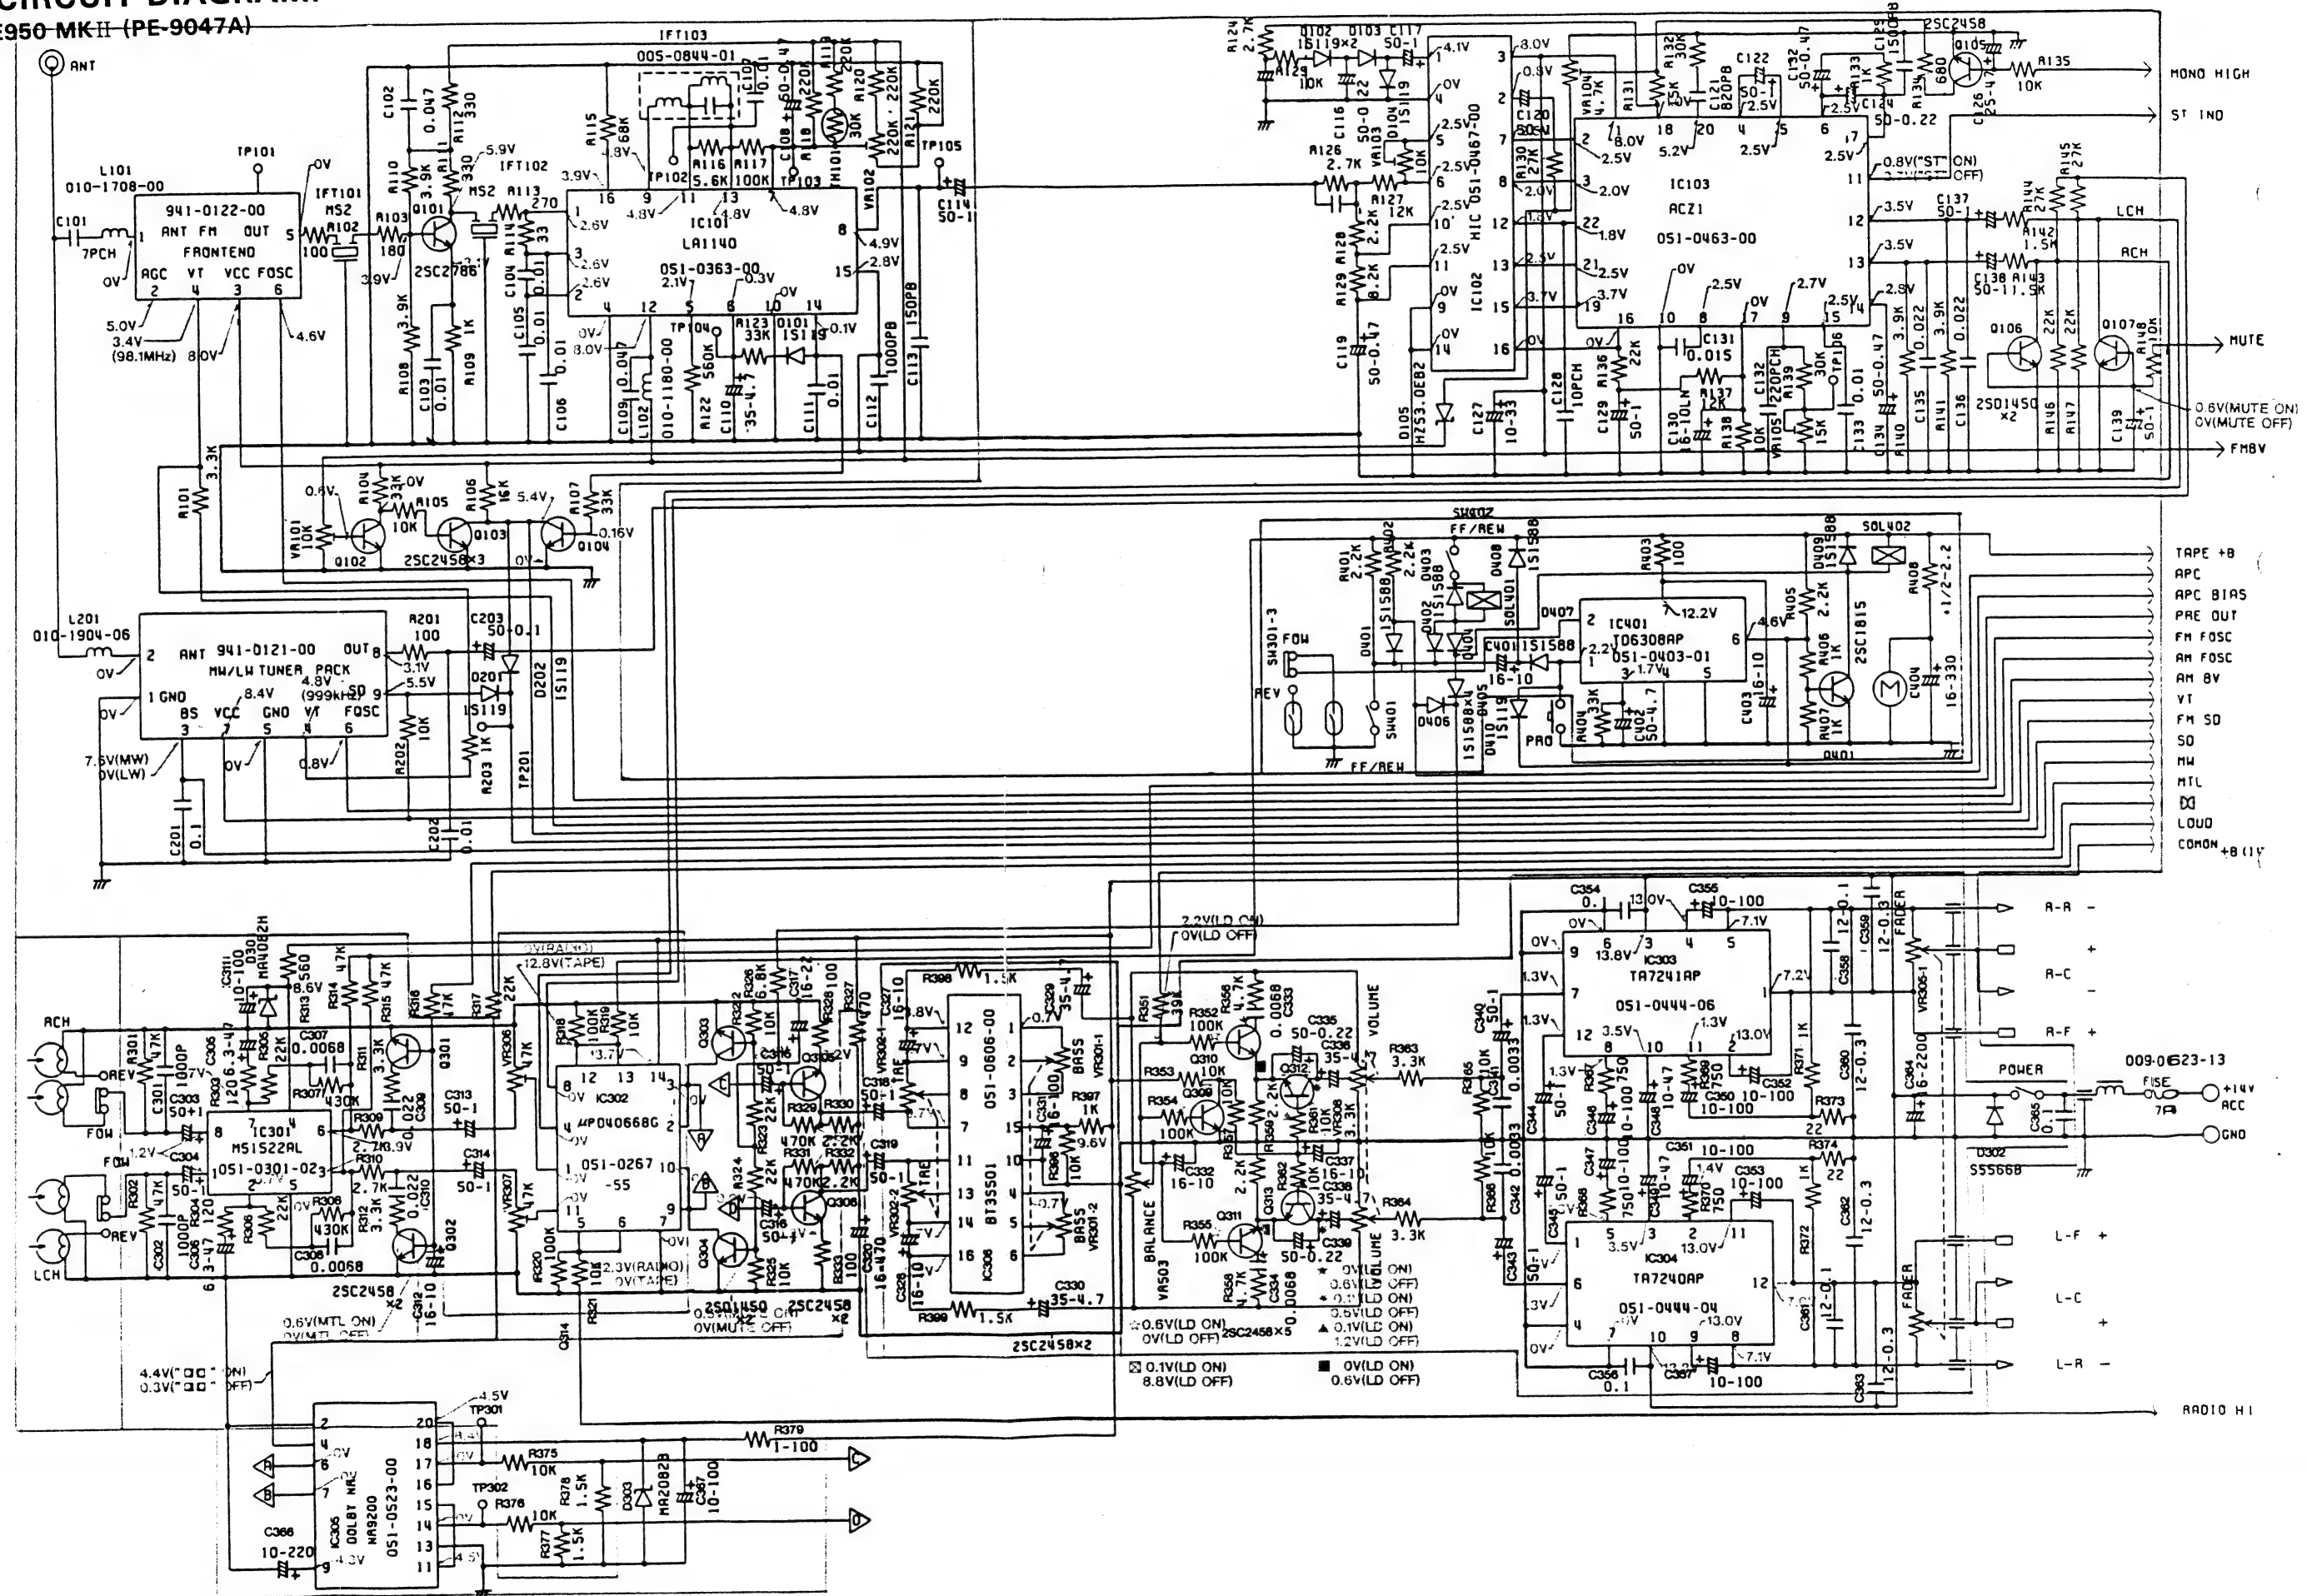


■CIRCUIT DIAGRAM:

●E950 MKII (PE-9047A)

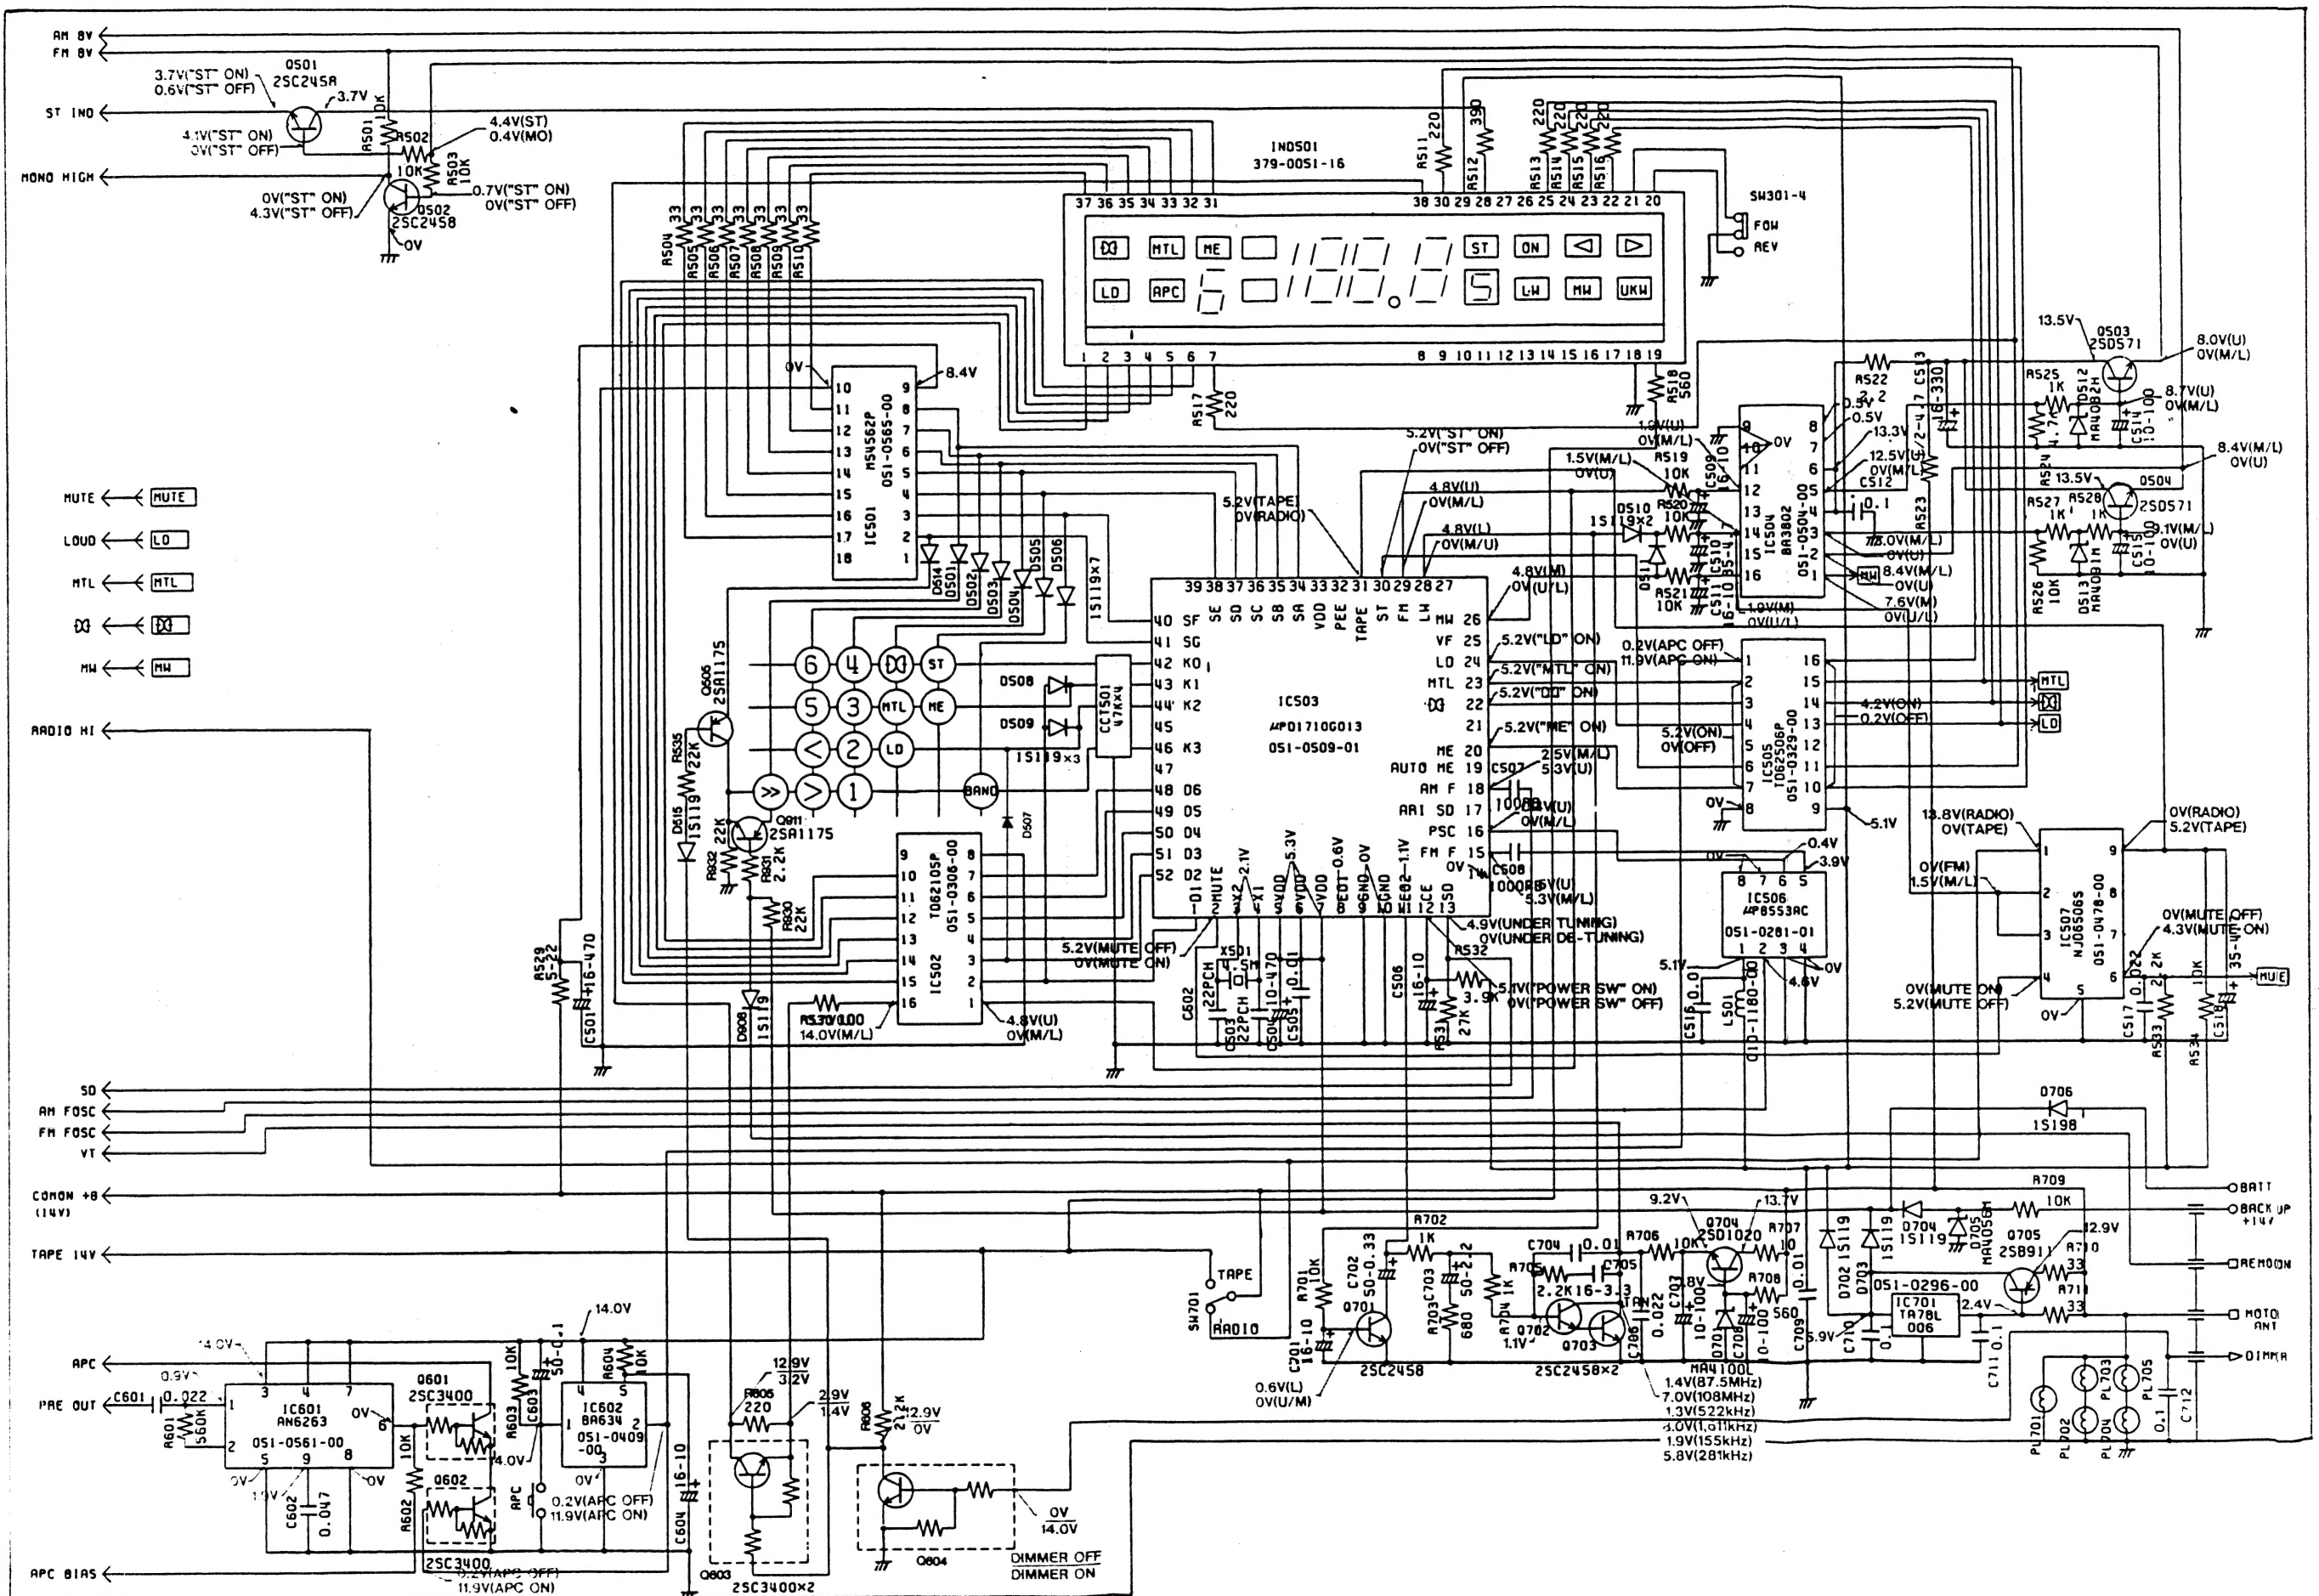


■ PRINTED WIRING BOARD:

● E950 MK II (PE-9047A)

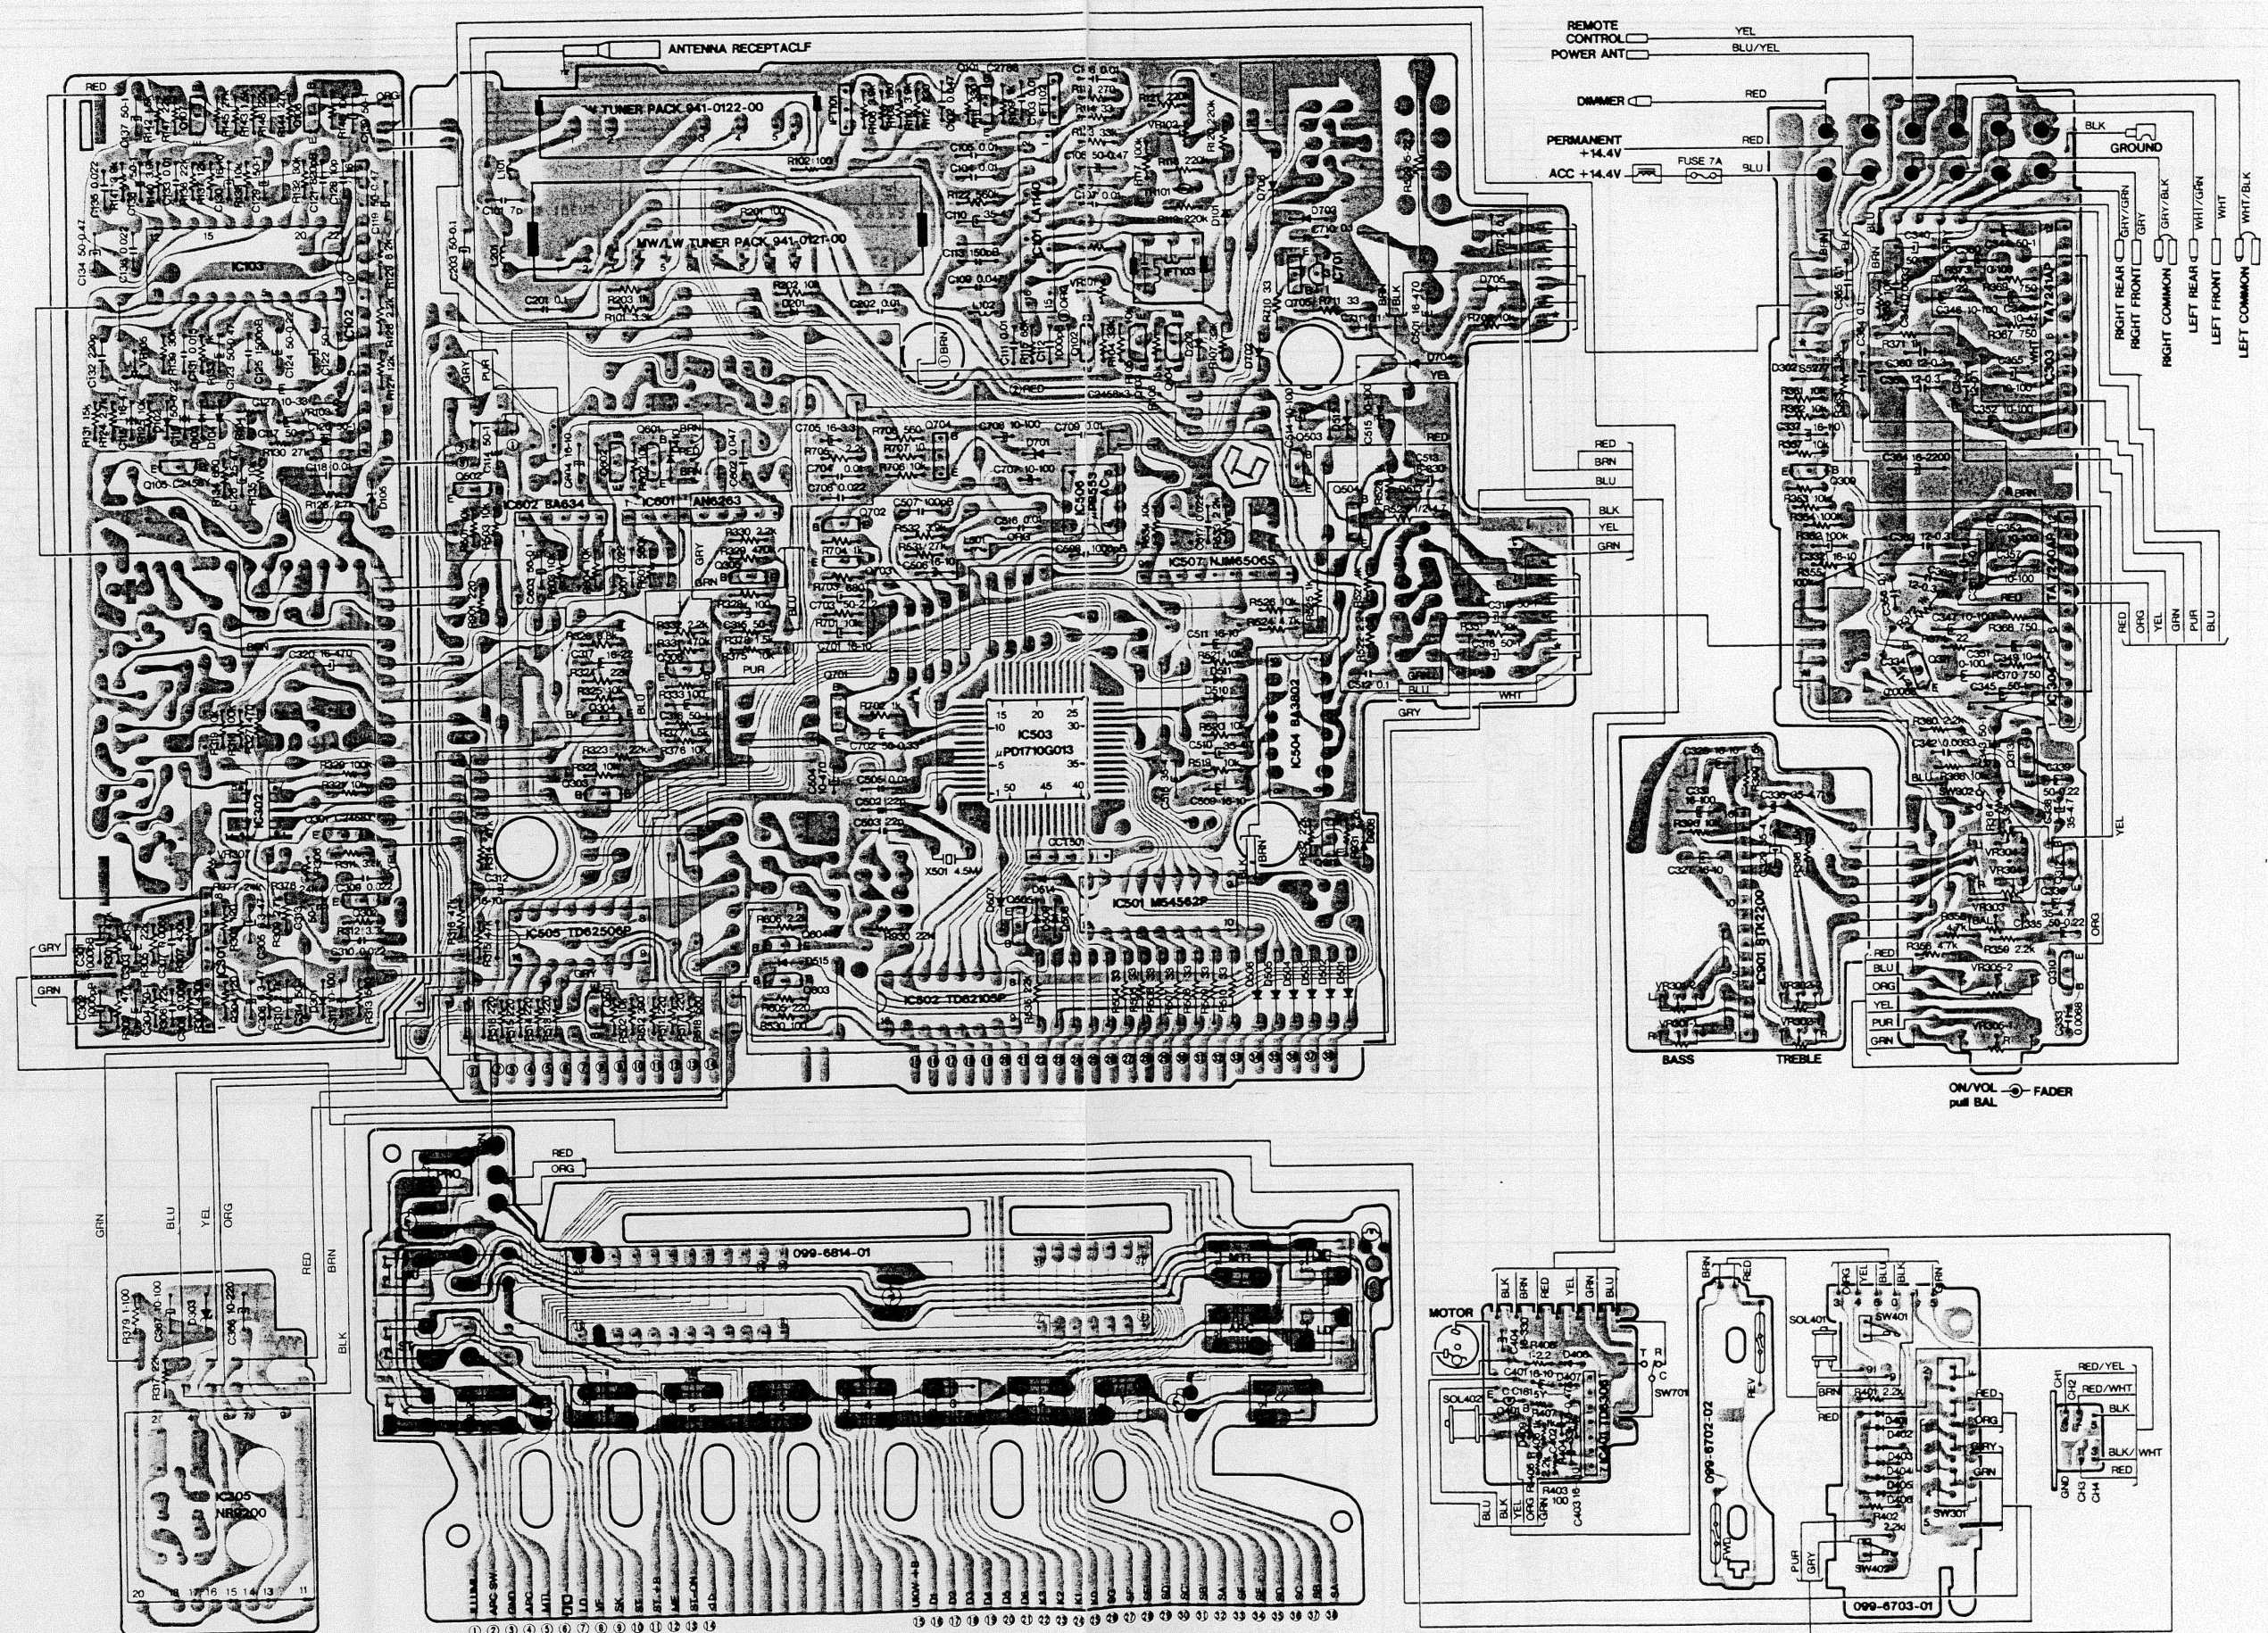


■ TUNER PACK CIRCUIT:

◎ UKW(FM) circuit

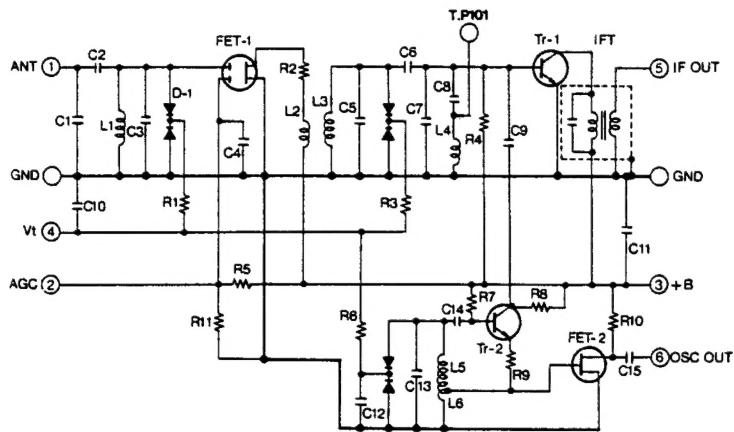

◎ MW/LW circuit

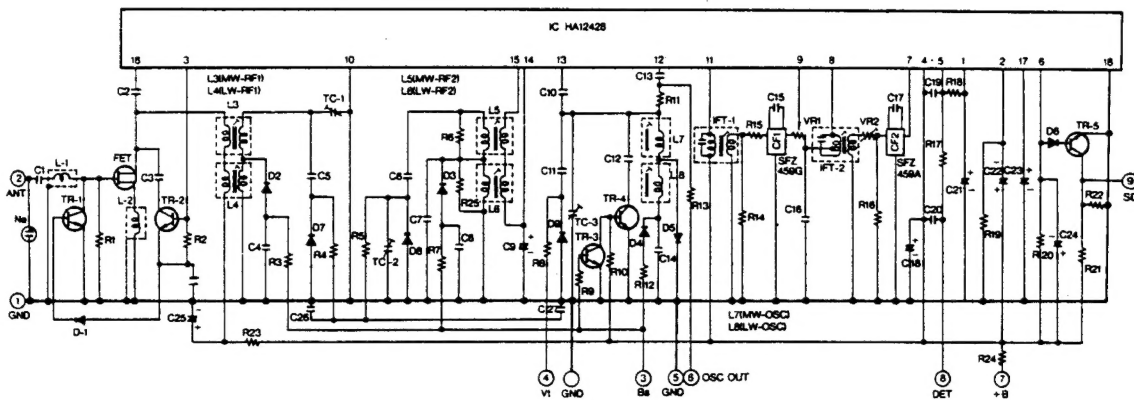

WAVE-FORM OF CONTROLLER

